

maxcom



FW74 AURUM SLIM

quick start manual



FitCloudPro



Find your
full user
manual



maxcom

AURUM SLIM

FW74
QUICK START
MANUAL

English (EN)

1. Charge your watch with the supplied cable before using it for the first time.
2. Download and install the control APP on your phone by:
 - a) Scanning the QR code:
 - b) Search Play Store / APP Store for FitCloudPro APP
3. During the installation process give the application permission to work and to access the required phone resources (phonebook, SMS, camera, etc.)
4. Set your sex, age, weight and height in the app and set activity goals.
5. Enable on your phone:
 - a) Bluetooth and GPS location (Android phones)
 - b) Bluetooth (iOS phones)
6. Connecting the watch with the application
 - a) Click on the "Device" icon in the middle of the bottom menu bar of the application, then "+" >Search for device< at the top of the screen and the magnifying glass icon. After searching for your FW74 watch, You click "Connect". The watch will ask for permission to connect - click the blue confirmation icon. A successful connection automatically sets the date and time of the watch.

Note: If You select "automatic sound connection", the watch will become a speakerphone for your phone. This function can be turned off in the watch menu: slide

the main screen down, click on the blue handset icon and then uncheck "Audio mode" at the top of the screen.

b) Click on the "Device" icon in the middle of the bottom menu bar of the application, then "+" >Search device< on the top of the screen and the QR scan icon on the top right of the screen. On the watch, go to Settings by sliding your finger down on the main screen and click the gear icon, then move the screen up to the QR code and click it and then scan it using the previously launched QR scanner in the application.

NOTE: after swiping down the home screen, there are two icons in the upper left corner: connection and handset. Red color of icon means no connection, blue means connection activity: Bluetooth and Audio, respectively.

7. Troubleshooting common problems with connecting SMART devices

- a) Turn on BT (the phone must be visible to other devices)
- b) Enable GPS/Location (Android devices)
- c) Install the application and give it permission during the installation process (for background work, access to multimedia, etc.)
- d) Connect to the watch USING THE APP

If unsuccessful then:

- e) Check if GPS is turned on
- f) In phone settings > Applications and notifications > Application permissions > permission to work in the background and notifications

g) Check if the watch/band is not already connected to the phone via the Bluetooth menu, if so > BT menu > forget device > and then connect via the application

8. FINAL REMARKS:

In the absence of reminders/messages (SMS, Messenger, skype, twitter, etc.) on the watch:

- a) Allow the app to access contacts, messages and selected social media in the app
- b) In Android phones, the same operation as above is often required in the phone settings (usually: Settings>Applications>Permissions)
- c) When the watch breaks connection with the phone

- Check the power management in the phone settings so that the control application runs in the background without saving battery. Typically: Settings>Battery/power management>Apps>(app name)>don't spare

- Optional: on the main screen, hold down the application icon (only works on some Android versions) to display its menu > application information > battery usage / battery > ... (each manufacturer calls it a bit differently: unlimited / allow foreground work etc.)

- d) Bluetooth is not connected or cannot connect:

- Reset your watch and reconnect
- Restart your phone and reconnect

- Disconnect all other Bluetooth devices
- 9. Full instructions and more information at www.maxcom.pl and the QR code below
- 10. Maximum EIRP value: 4,52 dBm
- 11. Environmental information

DO NOT THROW BATTERIES INTO FIRE



Note: This device is marked in accordance with the European Directive 2012/19/EC and the Polish Act on Waste Equipment electrical and electronic equipment, crossed-out waste bin symbol. Such marking informs that this equipment after its useful life cannot be placed together with other household waste.

The product should be used by selective collection at the points prepared for this purpose. Proper handling of used electrical and electronic equipment contributes to avoid consequences harmful to human health and the environment resulting from the presence of hazardous components, as well as improper storage and processing of such equipment.

The device contains a Li-ion battery. Used batteries are harmful to the environment. They should be stored in a specially designated place up to this point, in a suitable container,

in accordance with applicable regulations. Batteries and accumulators must not be disposed of with waste municipal waste, take them to the collection point

12. Note The manufacturer is not responsible for any consequences caused by misuse, abuse or non-compliance with the instructions. This manual is for informational purposes only. Some features and options described may vary by software and country. The manufacturer reserves the right to change or make changes without prior notice.

13. Simplified EU declaration of conformity

MAXCOM SA hereby declares that the type of radio device smartwatch FW74 is compliant with Directive 2014/53/EU, Directive 2011/65/EU (RoHS).

The full text of the EU declaration of conformity is available at the following internet address:

www.maxcom.pl/pl/content/23-deklaracje

Model name	Maxcom FW74 Aurum SLIM
Colors	Silver / Gold
Screen	1.933 AMOLED 368x448
Battery	200 mAh
Durability	IP67
Housing	Zinc Steel
Included in box	Smartwatch, silicon strap, metal strap, quick start, charging cable, safety info



RoHS
Compliant

MAXCOM S.A.
43-100 Tychy
ul Towarowa 23a
POLAND
tel. 32 327 70 89
fax 32 327 78 60
www.maxcom.pl
office@maxcom.pl

Service:
serwis@maxcom.pl