

Mobile Telephone **MM36D**

USER MANUAL



Reading this Manual is highly recommended prior to using the telephone.

CONTENTS:

1	Introduction.....	7
2	Accessories	8
3	Safety Precautions.....	8
4	Getting Started.....	10
4.1	SIM Card & Battery Installation.....	10
4.1.1	Desktop Charger	13
4.2	Low Battery Alert	14
5	Phone Description.....	14
5.1	Display Screen Description	17
5.2	Keypad Lock	18
6	MENU	19
7	Phonebook	19
7.1	Saving Contacts	19
7.2	Viewing Contacts.....	20
7.3	Deleting Contacts	20
7.3.1	Deleting a Single Contact	20
7.3.2	Deleting Multiple Contacts	20
7.3.3	Deleting All Contacts	21
7.4	Copying Contacts	21
7.4.1	Copying a Single Contact	21
7.4.2	Copying All Contacts	21
7.5	Transferring Contacts	22
7.6	Phonebook Settings.....	22
7.6.1	Memory Status.....	22
7.6.2	Speed Dial	22
8	Phone Calls	22
8.1	Direct Dial	22
8.2	Dial Phone Number from Phonebook	23
8.3	Dial Phone Numbers from Call Log.....	23
8.4	Speed Dial.....	23
8.5	Call Volume Adjustment.....	23

8.6	Options While Calling	23
8.7	Call Transfer	24
8.8	Answering Phone Calls	24
9	Call Log	24
10	Text & Multimedia Messages	25
10.1	Creating & Sending	26
10.2	Reading & Replying to Messages	26
10.3	Message Boxes	27
10.3.1	Inbox.....	27
10.3.2	Drafts	27
10.3.3	Outbox	27
10.3.4	Sentbox.....	28
10.4	Archive	28
10.5	Message Settings	28
10.6	Voicemail.....	29
11	Applications	30
11.1	Calculator	30
11.2	Calendar.....	30
11.3	Image Viewer.....	30
11.4	Voice Recorder	31
11.5	File Manager.....	31
11.6	SIM Services	32
12	Audio Player	32
13	Radio FM.....	33
14	Alarm Clock	33
15	Torch	34
16	Settings.....	34
16.1	Data & Time Settings	34
16.2	Profiles	34
16.3	Language	35
16.4	Display Screen.....	36
16.4.1	Wallpaper	36

16.4.2	Backlight	36
16.4.3	Brightness.....	36
16.5	Network Settings	36
16.6	Call Settings	36
16.6.1	Hiding Caller ID	36
16.6.2	Call Waiting.....	37
16.6.3	Call Forwarding.....	37
16.6.4	Call Barring.....	38
16.6.5	Black List	38
16.6.6	Auto Redial	38
16.6.7	Time Reminder.....	38
16.6.8	Phone Receiving Notification	39
16.6.9	Answering Phone Calls.....	39
16.7	Security Settings.....	39
16.7.1	PIN Code	39
16.7.2	Telephone Lock.....	39
16.7.3	Auto Keypad Lock	39
16.8	Connectivity.....	39
16.8.1	Bluetooth	39
16.8.2	APN Profiles	40
16.8.3	Data Services.....	40
16.9	Flight Mode	40
16.10	Restore Factory Settings.....	40
17	Computer Connection	41
18	FAQ (Troubleshooting).....	41
19	Terms of Warranty	43
20	Battery Information.....	44
21	Protect Your Environment	45
22	SAR Information	46
23	Frequency Range & Max Radio Frequency Power for the Radio to Work.....	47
24	Declaration of Conformity	48

If there is a problem with the phone, please contact the Maxcom technical assistance or return the item to the point of sale.

Call us directly at:

+48 32 325 07 00

The Set Includes:

GSM Telephone

Charger

Desktop Charger

Battery

User Manual

Warranty Card

Important: Keeping the original package is recommended as it might be used for transport.

Keep the receipt as it is necessary for warranty.

Important: The telephone works in the GSM 900/1800 MHz and WCDMA 900/2100MHz networks. At least one SIM Card must be inserted prior to switching on the phone.

Mobile Telephone GSM 900/1800, WCDMA 900/2100

Color Display Screen TFT 1,77" (160x128)

Large Font, Easy Menu

Large Backlit Keys

Phonebook -1000 Entries

SMS Memory – 500 Entries

Supports Micro SD Card up to 32 GB

Speakerphone

Radio FM

Alarm Clock

Audio Player

Battery: 1000mAh

Desktop Charger

Standby Time: up to 280 hrs.*

Call Time: up to 7 hrs (2G) & to 5.5 hrs (3G)*

Dimensions: 145 X 52 X 14mm

Weight: 89g

*depending on conditions and GSM network signal

1 INTRODUCTION

This User Manual has been published by the Manufacturer. Any corrections or modifications arising from mistakes, inaccuracies, and the phone or software upgrades might be made without prior notifications; such changes, however, will be reflected in the updated versions of the User Manual. To learn more, or to get any form of assistance please go to the website: www.maxcom.pl. The Manufacturer reserves all rights to the content of this User Manual.

Copyrights and trademarks as mentioned in this document are an exclusive property of their respective owners. Copying, distributing, storing or disseminating of the

copyrighted material, in part or in whole, without prior written consent of the author is strictly prohibited.

2 ACCESSORIES

Use only batteries, chargers, and accessories recommended by the phone's Manufacturer. Check at your point of sale what accessories are available in your area.

3 SAFETY PRECAUTIONS

Reading the guidelines below will minimize the risk of misusing the phone.

- **USING** – The telephone emits electromagnetic field that might negatively affect other electronic devices including medical equipment.
- Never use the phone in places where such use is prohibited, in hospitals, airplanes, refueling points or at proximity to flammable materials. Using the phone in such places might expose others to danger.
- Never use the phone without driving accessories while driving.
- A device and its accessories might contain small parts. Keep the phone and all parts out of reach of children.
- **SERVICE** - Never repair nor modify the phone on your own; all repairs should be made by an authorized service only.
- **CLEANING** - Never clean the phone with any chemicals or corrosives.
- **TORCH** – Never look directly into the beam of light.
- **HEARING AID**– If the User has a hearing assistance

device, the phone volume should be carefully adjusted in line with the hearing aid sensitivity.

- ELECTRONIC MEDICAL EQUIPMENT – Your phone is a radio transmitter that might interfere with performance of electronic medical equipment or implants, such as hearing aids, heart pace makers, insulin pumps, etc. Keeping a distance no shorter than 15 cm between the phone and the implant is recommended. To learn more about it, contact your health care provider or manufacturers of such medical equipment.
- ELECTRONIC EQUIPMENT: to avoid risk of demagnetizing, do not keep your device in close proximity to electronic devices for a longer time.
- WATERPROOF – The phone is NOT waterproof. Keep it dry at all times.
- DUSTPROOF – The phone is NOT dustproof, never use the phone in the area with increased level of dust.
- DISPLAY SCREEN – Avoid pressing too hard on the LCD screen and using sharp tools as doing so might damage the display screen.
- Never use any metal objects to press together the battery contacts as doing so might cause an explosion.
- Never expose the phone to either low or high temperature, direct sunlight, and high humidity. Never place the phone next to heating devices such as radiators, heaters, ovens, furnaces, camp fires, barbecue, etc.

- **PROTECT YOUR HEARING!**



Prolonged exposure to sounds of high volume might damage your hearing. Listen to music at a moderate level, and do not keep the phone too close to an ear, while using a speakerphone.

4 GETTING STARTED


A SIM Card must be installed prior to switching on the telephone. Pay careful attention not to damage the SIM Card while inserting it.

Keep SIM Card away from children.

4.1 SIM CARD & BATTERY INSTALLATION

Prior to inserting SIM Cards, make sure the phone is switched off, and the battery is removed. The charger must be disconnected. To insert the SIM Card, remove the battery first, as shown in the text and illustration below:

- When the phone is switched off, use your fingernail to lift up the battery cover from the right bottom side of the phone.
- Remove the battery by lifting it up with your fingernail, from the top side of the phone.
- Insert the SIM Card onto the tray with its metal contacts facing down. Make sure the notch on the Card will go towards the bottom of the phone.
- There is a slot for a MicroSD memory card below the SIM Card tray. Insert the Card into the slot. A memory card up to 32GB might be installed on the phone.

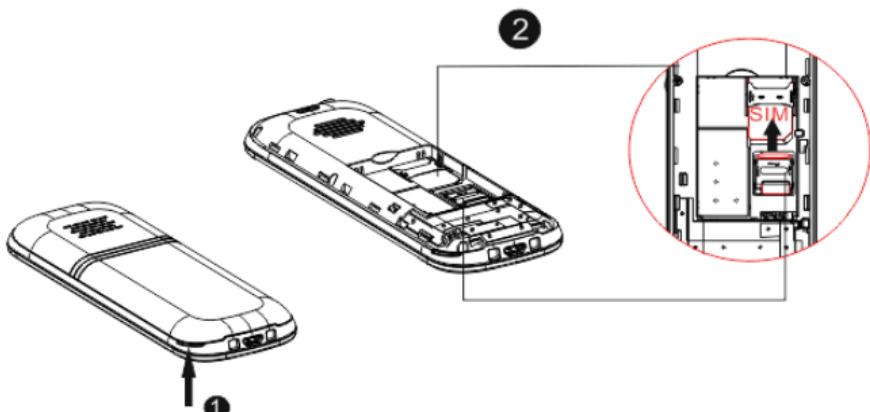


Pay careful attention while using the memory card, especially while inserting and removing the card. Some memory cards must be formatted on a computer prior to the initial use.


On the regular basis, make backup copies of data stored on cards used in other devices, if you use the SD cards! Misuse or other factors might damage the card or cause its content to be lost.

Battery Installation:

- Insert the battery so that the contacts +/- will go towards the bottom of the phone.
- After the battery is inserted, place the battery cover back on the phone and slide it upwards.

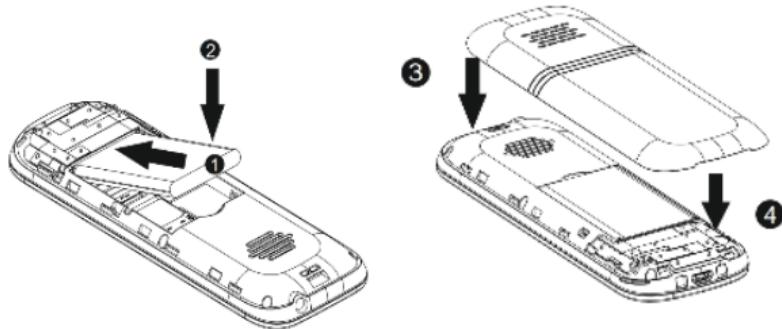

Charging the battery:

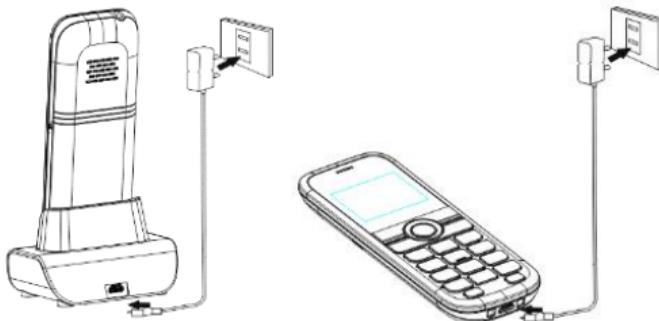

Important! Use the battery included in the set. Using other batteries might damage the phone and will void your warranty!

Never connect the charger if the phone back cover is not in place.

To charge the phone:

1. Plug the charger into the power outlet.
2. Plug the other end of the charger into the port located at the bottom of the phone. A notification about connecting the charger will appear on the display

screen, and the charger indicator will blink as long as the battery is being charged.

3. As soon as the battery is fully charged, disconnect the charger from the power outlet, and then disconnect the charger from the telephone. As soon as the battery is fully charged, the notification „Battery Full” will appear for a moment on the phone, and the battery icon on the display screen will stop blinking.

4.1.1 DESKTOP CHARGER

In case of using a desktop charger, first plug the small end of the regular charger into the desktop charger port, and then plug the power adapter into the power outlet. To charge the phone, just place the phone on the desktop charger with contacts facing down.

Important:


- Before you start charging, make sure the battery is properly installed.
- Never remove the battery while charging the phone – doing so might damage the phone.
- If the battery level is too low for the phone to work properly, the phone will show you a notification that the phone is about to get automatically switched off, and the phone will automatically switch off.
- If the battery is completely discharged, wait several minutes after connecting the charger for the charging icon to appear.
- If the phone has not been used for a long time, the battery might be so called „deeply discharged”; to restore the phone’s regular work, leave the charger plugged in

although there is nothing showing on the display screen. It might take even up to an hour.

4.2 Low BATTERY ALERT

The phone will warn you by the low battery alert (if warning alerts are enabled in the profile) and the notification „Battery Discharged” will appear on the display screen if the battery level is too low. There will be the icon  displayed on the display screen. Charge the battery as soon as you see such a notification.

5 PHONE DESCRIPTION

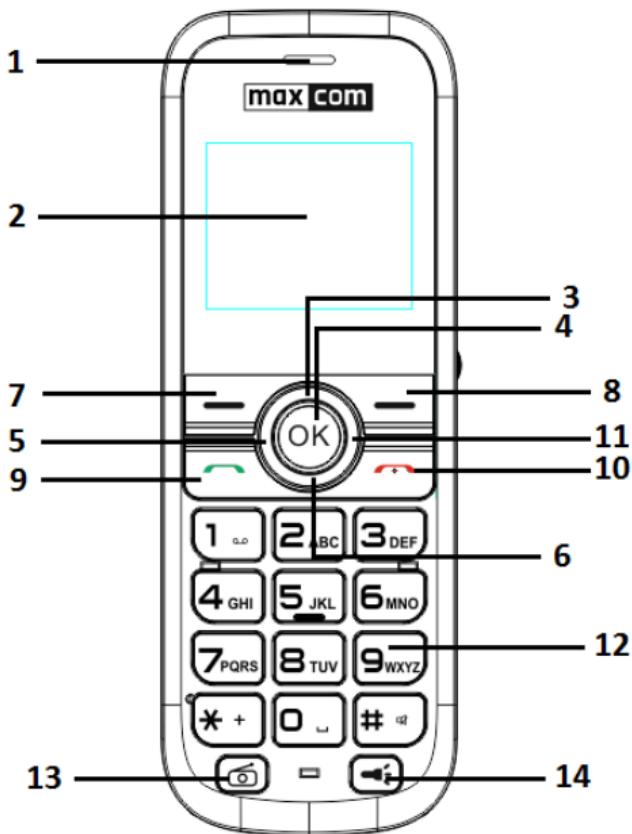

1	Speaker	8	Right Function Key - RFK
2	Display Screen	9	Green Receiver – making phone calls
3	Key Up	10	Red Receiver – Ending phone calls /returning to the main screen
4	Key OK	11	Key Right
5	Key Left	12	Numeric Keypad
6	Key Down	13	Radio FM Key
7	Left Function Key - LFK	14	Torch Key

Basic Functions of Keys

Key	Function
Red Receiver	Press: going back to standby mode, ending a phone call. Press & hold: switching on/off the phone
Green Receiver	Press: making phone calls; in standby mode entering the Call Log.
Navigation Keys	Up Keypad Volume Up
	Down Keypad Volume Down
	Left Audio
	Right Alarm

	LFK	Option as shown on the display screen
	RFK	Option as shown on the display screen
1		Press: digit 1 Press & hold: Voicemail
2-9		Press: digits 2 to 9 Press & hold: Dialing a previously assigned Speed Dial number
*		Enter: *, +, P, W. While typing text message: special symbols
#		Press: Changing the text input mode while typing text message; in standby mode – entering the symbol # Press & hold: Activating/Deactivating the Silent mode
	Key OK	Confirmation Key, in most cases its option concurs with options under the LFK

5.1

DISPLAY SCREEN DESCRIPTION



1. Network Signal.
2. Icons Showing Functions:

	Ringtone Only		Unread SMS/MMS
	Silent		Keypad Locked
	Alarm Active		Roaming Active
	Missed Phone Call		Connected to 2G Network

			Connected to 3G Network
The icons might vary depending on the software		<p>* The icon  appears also in domestic roaming if the User uses the other service provider's network</p>	

3. Battery Level.
4. Service Provider's Name.
5. Time.
6. Date.
7. Description of Function Keys.

Important: In order to save energy, the display screen will automatically go into sleep mode after certain time has passed. To enable the display screen backlighting, press any key.

5.2 KEYPAD LOCK

To lock the keypad, in standby mode press the left function key, and then press the star (*). To unlock the keypad, press the left function key, and then the star (*). There is no need to unlock the keypad in order to answer an incoming phone call.

Important: The keypad will lock (automatically or manually) only if the phone is in standby mode.

6 MENU

To go to MENU, in standby mode press the key **OK** or the **left function key**.

To navigate within MENU, press the keys **UP/DOWN**.

To confirm the option you have just selected, press the key **OK**.

To return to the previous MENU (go back), press the right function key. To go to standby mode, press the red receiver.

7 PHONEBOOK

7.1 SAVING CONTACTS

There are three methods to save a new Contact:

1. You can save a phone number from the list of missed and received phone calls (Call Log). To do so, in standby mode press the green receiver, select the number you want to save, and press „Options” (LFK). Select „Save in Phonebook”, press LFK, and select where you want to save the Contact. Enter the Contact’s name. Press the left function key to save.
2. You can add a new Contact by entering in standby mode the phone number you wish to save and pressing „Options” (LFK). Select „Save in Phonebook”, press LFK, and select where you want to save the Contact. Enter the Contact’s name. Press the left function key to save.
3. You can add a new Contact directly to the Phonebook. To do so, in standby mode press the right function key, and then use the key **Up** to select **New Contact->Select**. Decide where you wish to save the Contact. Enter the Contact’s name, and

then use the key **Down** to go to the text input box, enter the phone number, and press **Save (LFK)**.

7.2 VIEWING CONTACTS

Method 1

1. Go to MENU and select the Phonebook.
2. Enter the first letter of the name you are looking for.
3. The phone will go to the list of names that start with this letter. Press navigation keys UP/DOWN to scroll up and down the list.

Press the key „#” to change the text input mode.

Method 2

1. In standby mode press the RFK.
2. Enter the first letter of the name you are looking for.
4. The phone will go to names that start with this letter. Press navigation keys UP/DOWN to scroll up and down the list

Press the key „#” to change the text input mode.

7.3 DELETING CONTACTS

7.3.1 DELETING A SINGLE CONTACT

If you want to delete a Contact from the SIM Card or the phone, do as follows:

1. In MENU go to Phonebook
2. Select the Contact you wish to delete, press Options->Delete
3. Press the LFK to confirm.

7.3.2 DELETING MULTIPLE CONTACTS

If you want to delete multiple Contacts from the SIM Card or the phone, do as follows:

1. In MENU select: Phonebook->Options->Mark Multiple.
2. Select the Contact you need, and next press: Options->Mark. You can mark other Contacts as well.
3. Then select: Options->Delete Multiple.

7.3.3 DELETING ALL CONTACTS

If you want to delete all Contacts from the SIM Card or the phone, do as follows:

1. In MENU select: Phonebook->Options->Settings->Delete All Contacts
2. Select if you want to delete Contacts from the SIM Card or the phone memory, and confirm.

7.4 COPYING CONTACTS

7.4.1 COPYING A SINGLE CONTACT

To copy a Contact from the SIM Card onto the phone, or from the phone onto the SIM Card, you should:

1. In MENU select Phonebook
2. Mark the Contact you wish to copy
3. Press Options->Copy, and then select where you wish to copy the Contact to, and press the Left Function Key.

7.4.2 COPYING ALL CONTACTS

If you want to copy all Contacts from the phone or SIM Card, do as follows:

1. In MENU go to: Phonebook->Options->Settings->Copy All
2. Select where you want to copy Contacts to and press Yes to confirm.
3. Mark Contacts you wish to copy. To do so, press Options->Mark. Repeat the same for other Contacts. If you want to copy all Contacts, press Options->Mark All.

4. Press again Options->Copy Marked.

7.5 TRANSFERRING CONTACTS

You can transfer Contacts from the SIM Card to the phone memory or from the phone memory to the SIM Card. To do so, go to MENU->Phonebook->Options->Settings->Transfer All. Next, follow the steps as in Copying All Contacts (chapter **Error! Reference source not found.**).

7.6 PHONEBOOK SETTINGS

7.6.1 MEMORY STATUS

This option allows you to check the Card and phone memory status.

Select in MENU->Phonebook->Options->Settings->Memory Status.

7.6.2 SPEED DIAL

Select in MENU: Phonebook->Options->Settings->Speed Dial->Status, to enable or disable Speed Dial. If Speed Dial is enabled, and there are phone numbers assigned to keys 2-9, press and hold a certain key to dial its phone number. To assign a phone number to a key, in MENU select Phonebook->Options->Settings->Speed Dial->Assign Keys. Next, select the key you wish to assign the phone number to, press the LFK, select the phone number from the Phonebook, and press the LFK again.

8 PHONE CALLS

8.1 DIRECT DIAL

1. Dial the phone number you want to call.

To make a phone call internationally, entering „00” or „+” prior to an actual number is required. To enter „+” press the key „*” twice.

2. Press the green receiver to call the dialed number.
3. To end the phone call, press the red receiver.

8.2 DIAL PHONE NUMBER FROM PHONEBOOK

In standby mode, press the red function key to go to the Phonebook. Use keys UP/DOWN to mark the Contact you need. If you want to quickly go to a Contact whose name starts with the letter U, press the key 8 twice. To call the marked phone number, press the green receiver.

8.3 DIAL PHONE NUMBERS FROM CALL LOG

Press the green receiver when the phone is in standby mode to go to the list of recent phone calls. Use keys UP/DOWN to scroll up and down in the Call Log. Press the green receiver to make a phone call.

8.4 SPEED DIAL

If there are phone numbers already assigned to the keys 2-9 in standby mode press and hold the certain key of your choice to make a phone call.

8.5 CALL VOLUME ADJUSTMENT

While having a phone call, press the key RIGHT or LEFT to increase or decrease the phone call volume.

8.6 OPTIONS WHILE CALLING

To enable a speakerphone mode, while having a phone call press the right function key. To disable the speakerphone mode, press this key again.

While having a phone call, press Options to enable additional options:

- Suspend: it suspends a phone call

- End Call: it ends a phone conversation
- New Call: it allows you to place a new phone call
- Main Menu— it allows you to go to the main menu
- Voice Recorder: it starts recording the call
- Mute: enable/disable a mike
- DTMF: it enables/disables the DTMF
- Volume: it adjusts phone call volume.

8.7 CALL TRANSFER

It is a network service that must be activated with your service provider. While having a phone call, press the left function key (LFK) and mark the option New Call, dial the phone number, and press the green receiver. After the call has been placed, press the LFK, and press the option Forward. Confirm by pressing the LFK “Yes” to forward the call.

8.8 ANSWERING PHONE CALLS

To answer an incoming phone call, press the green receiver.

To reject an incoming phone call, press the red receiver.

To mute an incoming phone call, press the right function key.

9 CALL Log

To enter the Call Log, go to the main MENU, select Call Log, and then select:

Missed (to view missed phone calls): If there is a phone call you have missed, in Idle mode a receiver icon will appear at the top right corner of the display screen.

Dialed (to view dialed phone numbers).

Answered (to view answered phone calls).

To view the phone call details (call duration, number of phone calls, etc.), press the key **OK**.

There are symbols of different color for every type of phone calls.

After a phone call you want to view has been selected, press the left function key to view additional options:

- **Preview**, it allows you to check the phone call details
- **Call**, it calls a certain phone number
- **Send Message**, it allows you to send a message
- **Save in Phonebook**, it allows you to add a phone number to the Phonebook
- **Add to Black List**, it allows you to add a phone number to the list of blacklisted phone numbers
- **Edit Before Call**, it allows you to update the phone number before calling it
- **Delete**, it deletes a certain entry.

10 TEXT & MULTIMEDIA MESSAGES

The telephone allows you to send and receive text messages (SMS).

Multimedia messages (MMS) might be sent and received providing the MMS account has been properly configured, see *chapter 16.8.2*.

As soon as the symbol  appears on the display screen, there will be at least one unread message on the phone.

To go to **MENU Messages**, press the left function key in standby mode, and then press Messages->Inbox.

10.1 CREATING & SENDING

1. Go to MENU, and then select: Messages->Create Message to open a message editor.
2. Type the message if you want to send a text; you can also add an attachment such as an image, sound clip, video, etc.; adding an attachment will automatically convert the message into an MMS.
- **Text Input Method Change:** To change the text input method (digits, upper and lower case letters) press the key „#”; if you want to enter a symbol press the key „*”.
3. Sending messages: After the message has been typed (and attachments, if any, have been added), press **Options->Send** and decide if you want to dial the phone number manually or get it from the Phonebook. Mark the number and press OK. If you want to send a message to multiple recipients, you can add other phone numbers. To send a message, press **Options->Send**.
4. Saving messages: To save a message you have just typed, press Options->Save. The message will be saved in Drafts. You can decide for sent messages to be automatically saved; to do so, go to MENU and select: Messages->Settings->SMS->Save Sent Messages.

10.2 READING & REPLYING TO MESSAGES

1. If an unread message icon appears on the display screen or if you want to view received messages, in MENU go to: Messages->Inbox. To read a message, press the key OK.

While reading, you can use additional options by pressing Options.

2. The icon  next to a message marks this message as unread.

Press „Options” while reading a message to access the additional options:

- Reply: Create a message to the Sender.
- Call: Call the Sender.
- Forward: It allows you to send a message to other Recipient
- Delete: It allows you to delete a message
- Advanced: It allows you to use the number.

10.3 MESSAGE BOXES

10.3.1 INBOX

It lists received messages.

Use keys **UP** and **DOWN** to navigate within the Inbox.

10.3.2 DRAFTS

You can save unsent messages in the box „Drafts”. To do it, create a message, and after pressing the left function key, press „Save”.

Go to Drafts to send, delete, or edit saved messages.

10.3.3 OUTBOX

If you fail to send a message, it will be saved in the Outbox.

10.3.4 SENTBOX

If you use the option Save Sent Messages, the sent messages will be saved in the „Sentbox”.

Use keys **UP** and **DOWN** to navigate within the Sentbox.

10.4 ARCHIVE

An archive is a folder where you can save any messages that are important for you.

10.5 MESSAGE SETTINGS

Go to MENU and select: Messages->Settings

Select SMS:

- SIM

- **Profiles:** There is the **Message Center No** in profiles. It works as an intermediary between subscribers while sending text messages. To send a text message from a mobile phone, having a correct Message Center Number on the phone is required.

You will get this number from your Service Provider.

- **Validity Period:** Defines time when the message will be deleted from the Provider's network if it is not delivered. Do not try to update anything if you are not sure how to do it, as any doing so might disable this option by Provider.

- **Delivery Report:** you can set the phone to receive confirmation as soon as your text message is delivered to a recipient (network).

- **Reply Path:** it allows you to enable/disable the reply path.

- Memory Status

It allows you to check the memory status on the SIM Card and the phone.

- Save Sent Messages

It allows you to enable/disable sent messages.

Select MMS:

- Data Account

It allows you to select a data account necessary to send multimedia messages.

- Common

- **Composition:** it allows you to set for how long a slide will be displayed and an automatic signature.

- **Sending:** it allows you to set delivery reports, priority, auto save.

- **Downloading:** it allows you to download multimedia messages in the home network and in roaming and set the message filters.

- **Preferred Storage:** it allows you to select the preferred location to save your messages.

- **Memory Status:** it allows you to check the memory status.

10.6 VOICEMAIL

Voicemail is provided by a Service Provider and allows a Caller to leave a voice message if you don't answer an incoming phone call. To learn more, contact your Service Provider. If you want to change your voicemail number in MENU select: Messages->Settings->Voicemail, and enter the number you want.

You can get the voicemail number from the Service Provider. To get connected with your Voicemail, press and hold the key

1_{oo}

11 APPLICATIONS

11.1 CALCULATOR

To enable the Calculator, in MENU select: Applications->Calculator. You can perform the following mathematical operations: addition, subtraction, multiplication, and division.

Enter the first number using the keys 0-9; next, use keys UP/DOWN/RIGHT/LEFT to select an operation, and enter another number. Press OK.

11.2 CALENDAR

To enable the Calendar, in MENU select: Applications->Calendar.

Use keys Up/Down/Right/Left to navigate between certain dates.

Press the left function key to access the additional options:

- Preview: it allows you to preview a scheduled event
- View All: it allows you to see all scheduled events
- Add Event: it allows you to add a new event.
- Delete Event: it allows you to delete an event.
- Go to Date: enter the date you want to go to.
- Go to Today: it allows you to go to the current date on the calendar.
- Week View, changes the view of a calendar.

11.3 IMAGE VIEWER

In MENU select: Applications->Image Viewer.

Using this option allows you to access a list of images saved on the memory card in the folder Photos. The phone does not support some formats of images; the phone has also limited abilities to display images of large sizes.

Press the key OK to open an image or press the left function key Options to do the following: Preview, Image Details, Preview Styles, Send, Use As, Rename, Delete, Sort By Delete All, Memory.

11.4 VOICE RECORDER

You can record music or surrounding sounds.

- Select in MENU: Applications->Voice Recorder
- To start or pause recording, press OK.
- To stop recording, press the right function key.

Recordings are saved in the folder Audio. There is a possibility to play recordings. To do so, press the left function key Options->List, select the recording, and press the key OK.

11.5 FILE MANAGER

Select in MENU: Applications->File Manager

Press the left function key Options:

- Open: press, to open the folder of your choice.
- Format: select, to format.

After the folder has been opened, there are the following options available under the left program key:

- Open

- Create Folder: select, to open a new folder in the location of your choice
- Rename: it allows you to rename the folder
- Delete: it allows you to delete the current folder
- Sort by: name, type, time.

11.6 SIM SERVICES

Independently from the options offered by the phone, a SIM Card might offer you additional options. Name and options of such menu depend on type of available service.

Service that requires the Internet connection might be unavailable.

12 AUDIO PLAYER

You can use the audio player to play recorded audio files. They must be stored in the folder My Music. If there are new files recorded, after the audio player has been enabled, go to Playlist->Options->Refresh Playlist. To start or pause playing, press the key OK. If you do not want files to be played in background, before leaving the player stop playing by pressing OK.

You can move between the previous and subsequent audio files by using keys LEFT and RIGHT. To change the playing options, go to:

Playlist ->Options->Settings.

Press the key UP to change replaying options.

Press keys * and # to adjust the volume.

The phone supports files in WAV, AMR formats.

13 RADIO FM

The telephone has a built-in FM radio.

Warning: Quality of reception depends on your location. Reception of radio stations is affected by multiple external factors that might cause poor quality of reception, but such poor quality is not grounds for filing a complaint about the product.

To enable the radio, select in MENU: Radio FM. To switch on/off the radio, press the key OK. Before you leave the radio, stop its playing by pressing the key OK, and then press the red receiver key.

Key functions while playing the radio:

- RIGHT: subsequent channel
- LEFT: previous channel
- UP: frequency increases by 0,1 MHz
- DOWN: frequency decreases by 0,1 MHz
- #: volume up
- *: volume down
- Red receiver: return to menu
- Keys 1 – 9: selecting the radio station from the list of channels (radio stations must be saved)

14 ALARM CLOCK

You can select five independent alarms in the phone. To activate the alarm in MENU press: Alarm. Select the alarm you want, and press Edit. You can activate/deactivate an alarm, set time for alarm to go off, snooze, repeat, alarm ringtone. If the phone is switched off, the alarm clock will go off as long as the battery level is sufficient. If the alarm goes off, press the left function key to dismiss or right function key

to snooze; the alarm will go off again as soon as the snooze time is over.

15 TORCH

You can enable/disable the torch by pressing and holding a dedicated torch key.

16 SETTINGS

Select in MENU: Settings, and then:

16.1 DATA & TIME SETTINGS

To set time and date, select in MENU: Settings->Time&Date. Select „Time Zone”, to select a right city, and then select „Set Time/Date” to enter time and date. Use keys Up/Down/Right/Left to move between the date and time, use keys 0-9 to enter the date and time.

You can also set time format (12h or 24h), date format (DD/MM/YYYY, MM/DD/YYYY or YYYY/MM/DD) and the date separator.

If you remove the battery from the phone, after placing the battery back you will be required to set date and time (if it is not automatically updated from the network).

Option Auto Time Update allows you to decide if, after switching on the phone, time is to be updated automatically, upon confirmation, or won't be updated at all.

16.2 PROFILES

The telephone has a few profiles to adjust the phone to different circumstances you might be under. You can activate and customize each profile but Silent. Available profiles: General, Silent, Outdoors, Customized.

In Profiles, use the option Adjust to change the following:

- Alert Type
- Ringtone
- Ringtone Volume
- Message Alert
- Message Alert Volume
- Keypad Alert
- Keys Volume
- Enable/disable warning alerts

In standby mode, press and hold the key # to activate the profile Silent, press and hold the key # again so you can go back to the previous profile.

16.3 LANGUAGE

It allows you to change the menu language. If you select a foreign language by accident, to set a language of your choice in standby mode, press:

- 1x OK
- 1x UP
- 1x OK
- 2x DOWN
- 1x OK

Select the language of your choice, and press OK.

16.4 DISPLAY SCREEN

16.4.1 WALLPAPER

Select a wallpaper for your phone (it will work as a display screen background in standby mode).

16.4.2 BACKLIGHT

Display screen backlight: it allows you to set time for the display screen to be backlit.

16.4.3 BRIGHTNESS

The option allows you to set the display screen brightness. Use the key LEFT/RIGHT to adjust brightness.

16.5 NETWORK SETTINGS

Network Selection: you can select your Service Provider either manually or automatically.

Service Selection: it allows you to select the service GSM, WCDMA or Automatically.

Network Info: it allows you to check basic information about the network.

16.6 CALL SETTINGS

16.6.1 HIDING CALLER ID

It is a network service. If your Service Provider offers such service, configuration will be required. This option allows you to hide your own number while having an outgoing phone call.

Select „Detects Network”, „Hide Number” or „Send Number” and press „OK”.

16.6.2 CALL WAITING

It is a network service. If your Service Provider offers such service, configuration will be required.

Go to MENU and select the option: Settings->Call Settings->Call Waiting to check the availability status and select if you want to activate this option.

If Call Waiting is enabled, and you are talking on the phone, you will be notified about another incoming phone call by a special another incoming phone alert. You can answer another incoming phone call and suspend the first one.

16.6.3 CALL FORWARDING

It is a network service. If your Service Provider offers such service, configuration will be required. The User might direct incoming calls to be forwarded directly to voicemail or another number of his/her choice.

1. To set the option of Call Forwarding, go to MENU and go to: Settings->Call Settings.->Call Forwarding.
2. Then select when you want to forward phone calls from an available list: **1 All voice calls** (all incoming phone calls are forwarded to a selected number), **2 If unavailable** (incoming calls are forwarded if the phone is switched off or out of reception), **3 If I don't answer** (incoming phone calls are forwarded if you don't answer the phone) **4 If busy** (incoming phone calls are forwarded if you are currently talking on the phone), **5 Forward all phone calls** **6 Annul all forwards**.
3. Press **Enable** and enter the phone number you wish to forward the phone call to in order to enable this option or **Disable**, to have this option disabled.

To see what is the current status of this option, go to: **Check Status**.

16.6.4 CALL BARRING

It is a network service. If your Service Provider offers such service, configuration will be required. This option allows you to restrict certain types of phone calls.

1. In MENU go to:

Settings->Call Settings->Call Barring

2. From the list select the type of phone calls you want to restrict. You can restrict all outgoing phone calls, all international outgoing phone calls, international phone calls (except to home), all incoming phone calls, and incoming phone calls in roaming. You can also update the call barring password.

16.6.5 BLACK LIST

You can add any number to the Black List. If the option to restrict incoming phone calls and text messages is enabled (selected option Reject), any phone call and a text message from the blacklisted number will be automatically rejected.

16.6.6 AUTO REDIAL

If the option is enabled, and you fail to place a phone call, the phone will automatically redial the phone number.

16.6.7 TIME REMINDER

You can set the phone to remind you about phone call duration. Every predefined period (30-60sec) or after certain time has passed (1-3000sec), while having a phone conversation you will hear a beep to notify you about time period that has just passed.

16.6.8 PHONE RECEIVING NOTIFICATION

If this option is enabled, after a phone call to a Recipient has been successfully placed, you will hear a notification alert.

16.6.9 ANSWERING PHONE CALLS

You can set an incoming phone call to be answered by pressing any key.

16.7 SECURITY SETTINGS

16.7.1 PIN Code

You can enable/disable the phone to request the PIN Code every time the phone is switched on, and update the PIN Code.

16.7.2 TELEPHONE LOCK

You can enable the Phone Lock. To switch on the phone, you will be prompted to enter the Lock Code. The default Lock Code is 1122.

16.7.3 AUTO KEYPAD Lock

This option allows you to enable and set time to pass before the keypad will be automatically locked.

16.8 CONNECTIVITY

16.8.1 BLUETOOTH

Bluetooth connectivity allows you to send and receive files. You can also connect other devices such as wireless headset.

In Menu Bluetooth you can select one of the following options:

- Bluetooth Status: press the key OK or the left function key to enable/disable Bluetooth.

- Visibility: decide for your device to be visible to other Bluetooth devices.
- My Device: this option displays names of all detected Bluetooth devices. To get connected to a certain device, activate the option and select: Bluetooth->My Devices->Search for New Device. Press the left function key „Pair”, and next enter the password on both devices.
- My Name: select the name for your device.
- Advanced: allows you to change the advanced settings.

16.8.2 APN PROFILES

You can add a MMS account to the phone.

You can get a correct configuration from the Service Provider.

16.8.3 DATA SERVICES

Use this option to enable/disable data services.

16.9 FLIGHT MODE

You can enable Flight Mode. If this mode is enabled, there will be no connection with the GSM network and no possibility to make phone calls, receive/send messages, etc.

16.10 RESTORE FACTORY SETTINGS

Use this option to restore factory settings. Select in MENU: Settings->Restore Factory Settings, and then enter the security code. Press the green receiver button to confirm.

Warning: Default security code: 1122

17 COMPUTER CONNECTION

You can connect the phone to a computer using a USB cable, and therefore you can copy and transfer files between the phone and the computer.

Getting connected:

- plug the USB into the phone
- plug the other end of the USB cable into the USB port in the computer
- there will be a message on the display screen: „USB Memory” and „Port COM”. Select „USB Memory”

18 FAQ (TROUBLESHOOTING)

Only qualified service is authorized to repair the phone. Any attempts of unauthorized repair and modifications void the Manufacturer's warranty!

„Cannot make a phone call”	Make sure the number you are dialing is correct. If you make an international phone call, dial a country code before the actual number (eg. 0049 or +49 for Germany). If you have a prepaid card, make sure there are sufficient funds available on the card to place a phone call.
“SIM Card in place, emergency calls only (112)”	Make sure the SIM Card is installed correctly or is enabled in MENU.

“The phone does not work, the phone does not charge when plugged in”	<p>The phone might be switched off; to switch on the phone, press and hold the red receiver button for about 3 seconds.</p> <p>If you have not used the phone for a long time, the battery might be “deeply-discharged”; to recover a deeply-discharged battery leave your charger plugged in, although there will be no image on the display (even up to 1 hour).</p>
„Can I make a phone call while abroad?”	If you are out of the country and ROAMING is enabled, your phone will automatically use the foreign telephone network. To learn more, contact your Service Provider.
„Can I make an emergency call if there is no reception or if there are no funds on my account?”	<p>If you are in the area with no reception by any network, no phone calls can be made.</p> <p>If you have no funds available on the account, emergency call to 112 can be made.</p>
„How to get the most of reception?”	If there is a message „Does not work” or “No Service” on the display, it means there is no signal or sufficient funds on the account. In such a case, only making emergency call 112 is possible as long as the User is in the area covered by another service provider.

	Reception might be weaker if you are inside buildings. Move towards windows or get outside.
“There is a message on the display screen: „Press * to unlock; keys do not work”.	The keypad is locked. To unlock the keypad, press the Left Function Key, and then the key (*).
“What is the Text Message Center?”	It is the service provider's center number storing all text messages. The number is stored on the SIM Card, but you can change the number in the phone MENU and enter another number.
“When is the fee for making a phone calls charged?”	A fee for making a phone call is charged as soon as a phone call is made. To learn more about charging details, contact your service provider.
“Is there any way to make sure my message has been delivered to the recipient?”	Enable Delivery Report option. As soon as the text message is delivered to the recipient, you will get a return message (network service).

19 TERMS OF WARRANTY

The phone is covered under the warranty; proof of purchase is required. There is a charge for repair of phones damaged

due to misuse, electrostatic discharge or lightning strike. Any attempts to fix or modify the phone by the User will void the warranty!

The above information is presented solely for information purposes.

20 BATTERY INFORMATION

There is a battery in the phone that might be recharged with the charger, that is included in the set.

Telephone performance depends on various conditions.

Your distance from a relay transmitter, number and length of phone calls significantly reduce the battery life. While on the go, the phone switches between relay transmitters and such switching also significantly affects the battery life.

After multiple charges and discharges, it is natural for the battery to eventually lose its ability to hold charge. Get a new battery if you notice a significant drop in the battery performance.

Only batteries recommended by the Manufacturer can be used. Never leave the battery connected longer than 2-3 days.

Do not keep the phone in places of excessive high temperature. Otherwise, it might negatively impact the battery and the telephone.

Never use a battery that is clearly damaged. Doing so might cause a short circuit, and might damage the phone. Check battery installation for proper polarization.

Leaving a battery in places of excessively high or low temperature will decrease its life. The battery should be kept in temperature between 15°C do 25°C. If you install a cold

battery in the phone, it might not work as it should, and there is some risk of damaging the phone.

The set contains a Li-ion battery. Old batteries pose environmental risks. They should be disposed of at a special place in a special container in compliance with current regulations. Never throw old batteries or chargers to municipal solid waste, they should be collected for disposal.



NEVER PUT BATTERIES AND CHARGERS INTO FIRE!

21 PROTECT YOUR ENVIRONMENT

Important: The phone is marked in compliance with the European Directive of 2012/19/EU and the Polish Act on Waste Electrical and Electronic Equipment, and with the symbol of waste electricals. Such a symbol tells us that the device, after use, must not be disposed of in the normal household waste stream.

Important: Never throw the phone nor accessories to municipal solid waste!!! The product should be utilized in authorized places only.

As the product contains hazardous components, improper storage and use of such equipment might lead to serious consequences harmful for both people and natural environment. To avoid such consequences, proper handling of waste electrical and electronic equipment is essential.

To recycle materials used to produce the phone packaging, follow the local recycling regulations in your area.

22 SAR INFORMATION

This telephone model meets all international guidelines pertaining to the impact of radio waves. The device is a radio transmitter and receiver. It has been designed not to exceed any limits of radio waves impacts, in compliance with international guidelines. These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an independent scientific organization with a safety margin to protect all people regardless their age and health condition. Such guidelines use a unit of measurement called Specific Absorption Rate (SAR) – actual absorption.

As recommended by ICNIRP, the border value of SAR for portable equipment is 2,0 watts per kilogram (W/kg). SAR value is determined at the maximum transmit power and in the full spectrum of frequencies covered by research; the actual SAR value while the product is working might be much lower than the maximum level. Such discrepancies result from automatic changes in device power necessary to ensure that the device operates at a minimum power level required to be connected with network.

Although SAR values might vary for different models of phones or even for different positions of the same model, they are all compliant with regulations pertaining to safe level of radiation.

According to WHO current research, there is no need to apply any special restrictions in using portable devices. According to WHO, in order to reduce radiation, a length of conversation should be reduced, or headphones or speakerphone should

be used, or the phone should not be held in proximity to head or body.

The highest SAR value taken in tests	
SAR – device next to head	GSM900: 0.423W/Kg 10g Head SAR DCS 1800: 0.116W/Kg 10g Head SAR WCDMA 900: 0.371W/Kg 10g Head SAR WCDMA 2100: 0.465W/Kg 10g Head SAR
SAR – device next to body	GSM900: 0.677W/Kg 10g Body SAR DCS 1800: 0.673W/Kg 10g Body SAR WCDMA 900: 0.639W/Kg 10g Body SAR WCDMA 2100: 0.906W/Kg 10g Body SAR

SAR values might also vary due to various reporting and testing requirements in different countries as well as to different frequencies in a certain network.

23 FREQUENCY RANGE & MAX RADIO FREQUENCY POWER FOR THE RADIO TO WORK

Frequency Range:

E-GSM900: 880-915 MHz(TX); 925-960 MHz(RX)
DCS Band: 1710-1785 MHz(TX); 1805-1880 MHz(RX)
WCDMA900: 880-915 MHz(TX); 925-960 MHz(RX)
WCDMA2100: 1920-1980MHz(TX); 2110-2170MHz(RX)
Bluetooth: 2402-2480 MHz
FM: 87.5 - 108.0 MHz (Rx)

Max radio frequency power within the Frequency Range:
EGSM 900: 32,51 dBm, DCS 1800: 28,97 dBm
WCDMA 900: 23,04 dBm, WCDMA 2100: 22,54 dBm
Bluetooth: 3.38 dBm EIRP

24 DECLARATION OF CONFORMITY



MaxCom S.A.
ul. Towarowa 23a i 43-100 Tychy

Tel.: +48 32 327 70 89
Fax +48 32 780 30 00

office@maxcom.pl
www.maxcom.pl

PL

Declaración Zgodności UE 15/2018/RED

Nazwa i adres producenta:

Maxcom S.A., ul. Towarowa 23a, 43-100 Tychy, Polska

Niniejszą deklarację zgodności wydaje się na wyłączną odpowiedzialność producenta.

Przedmiot deklaracji:

Telefon komórkowy GSM/WCDMA

Model: MM36D

Wymieniony powyżej przedmiot niniejszej deklaracji jest zgodny z odnośnymi wymaganiami unijnego prawaodawstwa harmonizacyjnego:

Dyrektywą 2014/53/UE

Dyrektywą 2011/65/EU (RoHS)

Odwolania do odnośnych norm zharmonizowanych, które zastosowano, lub do innych specyfikacji technicznych, w stosunku do których deklarowana jest zgodność:

Radio Equipment Directive 2014/53/EU	
EN 60950-1:2006+A11:2009+ A1:2010+A12:2011+A2:2013	Test Report STS1808020A01
EN 50360:2017 EN 50566:2017 EN 62209-1:2016 EN 62209-2:2010 EN 50663:2017	Test Report STS1808020H01
Draft ETSI EN 301 489-1 V2.2.0 Draft ETSI EN 301 489-17 V3.2.0 Draft ETSI EN 301 489-52 V1.1.0	Test Report STS1808020E01
EN 55032-2015 EN 55035-2017 EN 61000-3-2:2014 EN 61000-3-3:2013	Test Report STS1808020E02
ETSI EN 301 511 V12.5.1 ETSI EN 301 908-1 V11.1.1 ETSI EN 301 908-2 V11.1.2 ETSI EN 300 328 V2.1.1	Test Report STS1808020W01
Final draft ETSI EN303 345 V1.1.7	Test Report STS1808020W02
Final draft ETSI EN303 345 V1.1.7	Test Report STS1808020W03

RoHS Directive 2011/65/EU	Test Report STSGZ1800160
---------------------------	--------------------------

Jednostka notyfikowana:

PHOENIX TESTLAB GmbH , Oznaczenie identyfikacyjne: 0700
przeprowadzała badania zgodnie z wymaganiami wyszczególnionymi w załączniku III, moduł oceny zgodności B Dyrektywy 2014/53/EU i wydała certyfikat badania typu UE:
Certificate No. 18-212139a

Podpisano w imieniu: Maxcom S.A.

miejsce i data wydania:

Tychy, 11-09-2018

imię i nazwisko, stanowisko:

Adam Grzyb, Dyrektor d/s Rozwoju

If there is any technical assistance required, contact our technical department at:

+48 32 325 07 00 or email us at: serwis@maxcom.pl

Our website:

<http://www.maxcom.pl/>



MAXCOM S.A.
ul. Towarowa 23a
43-100 Tychy
Poland

tel.: +48 32 327 70 89
fax: +48 32 327 78 60
www.maxcom.pl
e-mail: office@maxcom.pl