

---

maxcom

Manual  
GSM Mobile Phone  
Maxcom **MM426SE**





If technical assistance is required, please contact the hotline at  
(+48) 32 325 07 00 or [serwis@maxcom.pl](mailto:serwis@maxcom.pl)

Our website:

<http://www.maxcom.pl/>

### **Set contents**

GSM Phone

Charger

Desk stand

USB cable

Battery

Manual

Warranty card

It is recommended to keep the packaging, it may be useful for possible transport.

Keep the receipt, it is an integral part of the warranty.

Note – The phone works in the GSM 900/1800 network. Before powering on, you must insert the SIM card(s) correctly.

## **GSM 900/1800 Mobile Phone**

Large backlit keys

Color display

Dual SIM

MicroSD memory card slot

Large font, simple Menu

Hands-free function

Phonebook -300 entries

SMS sending and receiving function

Quick Pick 8 Numbers

View call time

Loud Ringtone

Bluetooth

Radio FM

Flashlight

Calculator

Alarm clock

600 mAh battery

Standby time: up to 240 hours, (up to 120 hours in dual SIM mode)\*.

Talk time up to 5 hours\*

Weight:72g

\*depending on conditions and GSM network signal

## Table of contents

1.	Safe Use Policy.....	8
2.	Installing the Components .....	9
2.1	SIM Card and Battery Installation.....	9
2.2	Charging the battery.....	12
2.3	Low battery alarm.....	14
3.	Button location .....	15
4.	Using your phone .....	18
4.1	Turn on your phone.....	18
4.2	Disable.....	18
4.3	Standby.....	18
4.4	Keypad.....	20
5.	MENU Operation.....	20
6.	Phonebook.....	21
6.1	Save contacts .....	21
6.2	View your contacts .....	21
6.3	Deleting contacts.....	22
6.3.1	Delete an individual contact.....	22
6.3.2	Deleting multiple contacts .....	22
6.3.3	Delete all contacts.....	23
6.4	Copying contacts.....	23
6.4.1	Copy a single contact.....	23
6.4.2	Copying multiple contacts .....	23
6.5	Transferring contacts.....	24
6.6	Blacklist.....	24
6.7	Select a few .....	24
6.8	Phone Book Settings.....	24
6.8.1	Dialling .....	24
6.8.2	Memory Status .....	25
7.	Connection.....	25
7.1	Direct dialing .....	25
7.2	Dial a number from the phone book .....	25
7.3	Dial numbers from the recent calls list .....	26
7.4	Speed Dial .....	26
7.5	Change the call volume .....	26
7.6	Options during a call .....	26
7.7	Answering calls .....	27
8.	List of calls .....	27

9. SMS and MMS messages.....	28
9.1 Texting and typing .....	28
9.2 Reading and replying to text messages .....	29
9.3 SMS mailboxes.....	30
9.3.1 Inbox .....	30
9.3.2 Items sent.....	30
9.3.3 Drafts.....	30
9.3.4 Outbox.....	31
9.4 Deleting messages .....	31
9.5 SMS settings .....	31
9.6 Voicemail.....	32
10. Tools.....	32
10.1 SOS.....	32
10.1.1 Entering, deleting, modifying emergency contacts .....	33
10.1.2 User Information .....	34
10.1.3 Alarm text .....	34
10.1.4 Disable the SOS alarm .....	34
10.1.5 SOS alert volume .....	35
10.1.6 SOS button.....	35
10.1.7 Low battery alert.....	35
10.2 Calendar.....	35
10.3 Calculator .....	35
10.4 Alarm.....	36
10.5 Flashlight.....	36
10.6 SIM services.....	36
11. Multimedia .....	36
11.1 Audio Player .....	37
11.2 Voice Recorder .....	37
11.3 Radio FM.....	37
11.4 File Manager .....	38
12. Settings .....	39
12.1 Profiles .....	39
12.2 Phone settings.....	40
12.2.1 Date and time settings .....	40
12.2.2 Automatic phone on/off .....	40
12.2.3 Language .....	41
12.2.4 Preferred input method .....	41
12.2.5 Display .....	41

12.2.6	Airplane mode.....	41
12.2.7	Screen backlight .....	42
12.3	Security settings.....	42
12.3.1	Pin .....	42
12.3.2	Phone security .....	42
12.3.3	Data security .....	42
12.3.4	Automatic keypad lock .....	42
12.4	Network settings.....	42
12.4.1	Dual SIM settings .....	43
12.4.2	Bluetooth.....	43
12.5	Call settings .....	43
12.5.1	Hiding a number.....	43
12.5.2	Call waiting .....	44
12.5.3	Call forwarding .....	44
12.5.4	Call Blocker.....	45
12.5.5	Advanced settings.....	45
12.6	Factory reset .....	46
13.	Connecting to a computer .....	46
14.	FAQ (Troubleshooting).....	46
15.	Terms of Use and Safety .....	48
16.	Warranty conditions.....	50
17.	Battery Information .....	50
18.	SAR Information.....	52
19.	Frequency range and maximum radio frequency power .....	53
20.	Charger - technical data .....	53
21.	Environmental Information.....	54
22.	Declaration of Conformity .....	55

## 1. Safe Use Policy

Reading the following rules will minimize the risk of misuse of the phone.

- It is not allowed to use the phone in an area where it is prohibited, e.g. gas stations or hospitals. Using your phone in these areas can put other people at risk. Do not turn on the phone if it may cause interference with other devices!
- Do not use your phone without the correct kit while driving.
- Do not use your phone in hospitals, airplanes, gas stations or near flammable materials.
- Your phone emits an electromagnetic field that can have a negative impact on other electronic devices, including medical equipment. The distance between the phone and the implanted medical device, such as a pacemaker, recommended by the manufacturers of medical equipment, should be maintained. People with implanted devices should read the guidelines of the manufacturer of the implanted medical device and follow these guidelines. People with a pacemaker should not carry the phone in a breast pocket, hold the phone to their ear on the opposite side of the body to the medical device to minimize the risk of interference, and turn off the phone immediately if they suspect interference;
- The device and its accessories may consist of small parts. Keep your phone and its components out of the reach of children.

- You must not make repairs or alterations on your own. Any defects should be removed by a qualified service provider.
- Only original battery packs and chargers should be used. The use of non-original accessories may cause damage to the device or cause an explosion.
- The phone is not dustproof, do not expose it to dust, metal filings, etc., as this may cause it to malfunction.

**WATERPROOF** – The phone is not waterproof.  
Keep it in a dry place.

## 2. Installing the Components


Before you turn on your phone, you need to install a SIM card. Be careful not to damage the card when inserting.

Keep SIM cards away from children.


### 2.1 SIM Card and Battery Installation

The phone has two SIM card slots: miniSIM and microSIM. If you have a card of a different size, without the possibility of breaking the microSIM, go to your carrier to replace the SIM card with the correct one. Before inserting the SIM card, make sure that the phone is turned off and the battery is removed. The charger should be unplugged. To insert the SIM card, first remove the battery according to the drawings and description:


- When the phone is turned off, in the bottom right corner of the phone, use your fingernail to pry open the battery cover and pull it off.

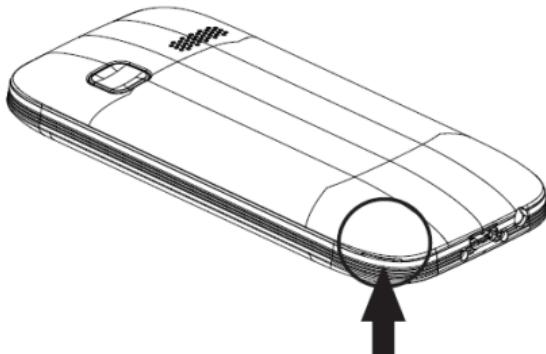


- Remove the battery by prying it with your fingernail from the top of the phone
- If you want to use two cards at the same time, first slide the microSIM card into the SIM2 slot

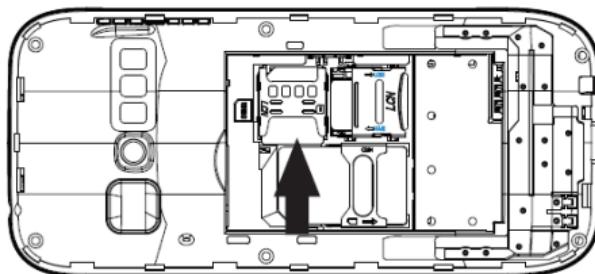

- Then insert the miniSIM card into the SIM1 slot

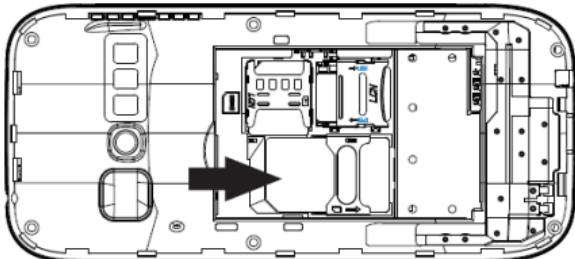


- Insert SIM cards with the metal contacts facing down. Pay attention to the cutouts on the Sim cards and on the phone case.
- Below the SIM2 slot is a slot for a MicroSD memory card. Slide the slot drawer towards the top of the phone (OPEN) and open it. Place the memory card in the slot, paying attention to the cutouts. Close the drawer and slide it towards the bottom of the phone (LOCK).

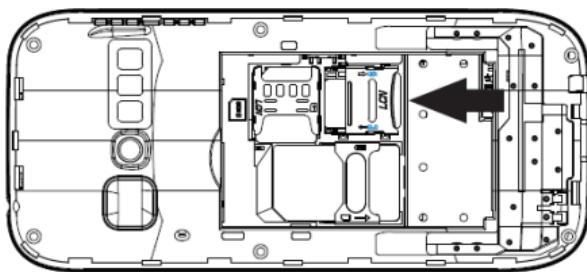


*Use caution when using a memory card, especially when inserting and removing it. Some memory cards need to be formatted with a computer before they can be used for the first time.*

*Regularly back up the information on the cards you use to other devices if you use SD cards! Improper use or other factors may cause damage or loss of card contents*

- Insert the battery with the +/- contacts facing the bottom of the phone.

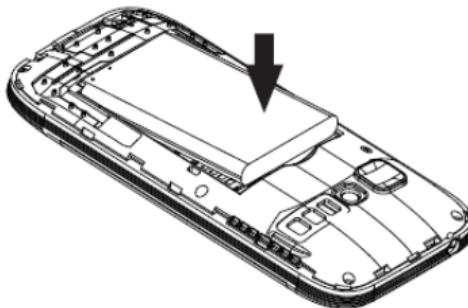

- After inserting the battery, place the battery cover on the phone and gently press down on its edges.

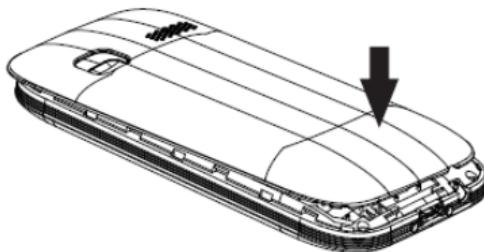

## **2.2 Charging the battery**

Remark! Use the battery included in the set. Using a different battery may damage your phone.

Do not connect the charger when the back cover is removed.

To charge your phone:

1. Plug the charger into a power outlet.
2. Plug the charger plug into the socket located on the bottom edge of the phone. The display will indicate that the charger is plugged in, and the dashes on the battery indicator on the display will appear and disappear while charging.  
You can also charge your phone using the Desk Stand. To do this, plug the charger cable into the outlet on the back of the desk stand, and then place your phone on the stand. A message will appear that charging has started.
3. When the battery is fully charged, unplug the charger from your phone, then pull the charger out of the power outlet.

When the charging process is complete, the message "Charging complete" will briefly appear on the display and the battery symbol will not pulse when the backlight is illuminated.

**Note:**

- Before starting the charging process, make sure the battery is installed correctly
- Do not remove the battery during the charging process – you may damage your phone
- If the battery voltage is too low for the phone to work properly, it will prompt you that the phone


will automatically turn off and then the camera will automatically turn off.


- If the battery is completely discharged (e.g. by leaving the flashlight on), after connecting the charger, wait several minutes before the charging symbol appears.
- 

### **2.3 Low battery alarm**

Your phone will alert you with a beep (if warning tones are enabled in your profile) and a "Battery discharged" message on the display when the battery level is too low. The .. symbol appears on the screen . Charge your batteries when prompted.

### 3. Button location

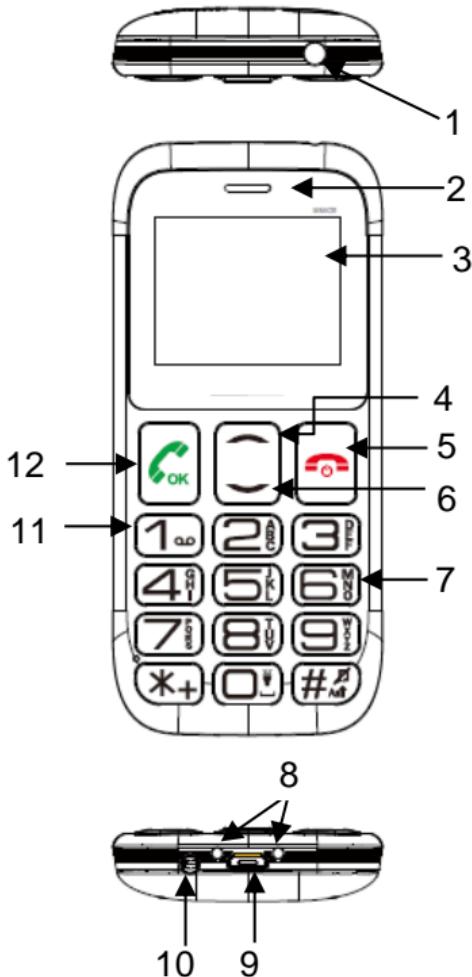

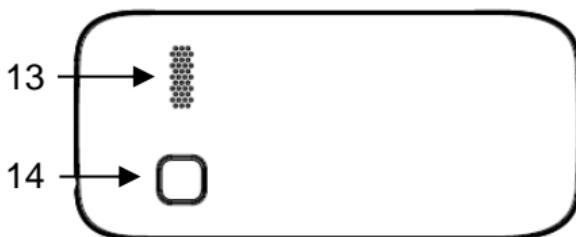

<b>1</b>	Flashlight	<b>8</b>	Desktop Cradle Charging Contacts
<b>2</b>	Call speaker	<b>9</b>	Charging/USB port
<b>3</b>	Display	<b>10</b>	Headphone jack
<b>4</b>	Up key	<b>11</b>	Voicemail button
<b>5</b>	Red handset – end call/return to home screen	<b>12</b>	Green handset – making a call
<b>6</b>	Down key	<b>13</b>	Ringtone/media speaker
<b>7</b>	Numeric keypad	<b>14</b>	SOS button

## Basic button functions

Button	Function
<b>Red handset</b>	Short press: return one position in the menu, end the call; In standby mode input to contacts Long hold: turn the phone off/on
<b>Green handset</b>	Short press: making calls; in standby mode input to the call log; Menu selection
<b>Navigation keys</b>	<b>Top</b> News
	<b>Bottom</b> Menu
	<b>1</b> Short press: number 1 Hold: Voicemail
	<b>0</b> Short press: digit 0 Hold: Flashlight on/off
	<b>2-9</b> Short press: numbers 2 to 9 Hold: Dials a preset speed dial number
	<b>*</b> Character input: *, +, P, W. When writing a text message: special characters
	<b>#</b> Short press: Change the input mode when typing SMS; enter the # character
	Hold: Turning on/off silent mode

## 4. Using your phone

### 4.1 Turn on your phone

Press and hold the red hang button to turn on your phone.

If you are asked for a PIN, you will need to enter it. You will find it in the SIM card starter kit.

After entering the code, confirm with the green phone key.

**Warning:** Entering the wrong PIN code 3 times in a row will lock the SIM card

It can be unlocked with a PUK code. Mistyping the PUK code 10 times will block the SIM card permanently

The phone will automatically download the date and time from the GSM network.


### 4.2 Disable

To turn off your phone, press and hold the hang up button.

### 4.3 Standby

When the phone is turned on but no action is taken, it is in standby mode.

## Display Description

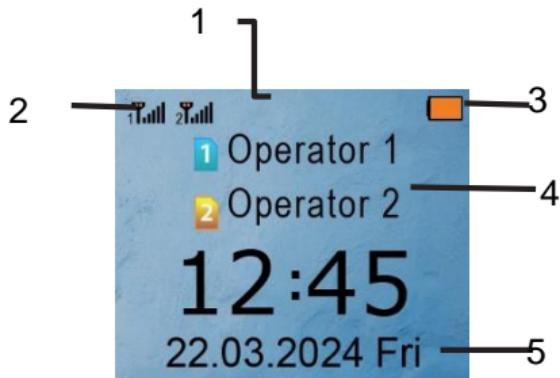

### 1. Icons showing the functions:

	Beep only		Headphones connected
	Beep + vibration		New SMS
	Vibration, then a bell		SOS active
	Vibration Only		Muted
	Active Alarm		Call forwarding enabled
	SMS inbox full		Locked keyboard
	Missed call		Active roaming
	Bluetooth enabled		Audio player enabled

Icons may vary depending on the software version	* The icon  also appears in domestic roaming when the subscriber uses the network of the other operator
--	--

2. Network Signal
3. Battery level
4. Operator name
5. Day of the week/Time/Date

#### **4.4 Keypad**

To lock the keypad, press the green handset key and then the asterisk (\*) in standby mode. To unlock the keyboard, press the green handset key and then the asterisk (\*). You don't have to unlock the keypad to answer the call.

NOTE: The keypad will lock (automatically or manually) only when the phone is in standby mode.

#### **5. MENU Operation**

To enter the MENU, press the DOWN key in standby mode .

To navigate the MENU, use **the UP/DOWN** keys.

To confirm the selected function, press the OK key (green phone).

To return to the previous MENU (undo), press the red phone key.

## 6. Phonebook

### 6.1 Save contacts

You can save a new contact in one of two ways:

1. You can save a number from the missed and received call list. To do this, press the green handset in standby mode, select the number you want to save and press **Options>Save to contacts**. Choose where you want to save (SIM or Phone). Enter a name for the contact. Press **Options> Save**.
2. You can add a new contact directly to your phone book. To do this, press the red handset key in standby mode, and then use the Down key to select **New Contact>Dial**. Select where you want to save the contact. Enter the contact's name, press the Down key to navigate to the number field. Enter the number and press **Options>Save**.

### 6.2 View your contacts

#### Method 1

1. Go to MENU and select Contacts
2. Enter the first letter of the name you are looking for
3. The phone will go to names starting with this letter. You can scroll through the list with the UP/DOWN navigation keys

Press the "#" key to change the typing mode

## Method 2

1. In standby mode, press the red earbud key
2. Enter the first letter of the name you are looking for
3. The phone will go to names starting with this letter. You can scroll through the list with the UP/DOWN navigation keys.

Press the "#" key to change the typing mode

### 6.3 Deleting contacts

#### 6.3.1 *Delete an individual contact*

If you want to remove a contact from your phone or SIM card, follow these steps:

1. From the MENU, select Contacts
2. Select the contact you want to delete, press **Options->Delete**
3. Press the green handset key to confirm

#### 6.3.2 *Deleting multiple contacts*

If you want to delete several contacts from your phone or SIM card, follow these steps:

1. In the MENU, select: **Contacts->Options->Select several->Remove few**
2. Select the appropriate contact, then use the green handset key to select/deselect the contacts.
3. Then select **Options->Remove Few>Yes.**

### **6.3.3 *Delete all contacts***

If you want to delete all contacts from your phone or SIM card, follow these steps:

1. In the MENU, select: **Contacts->Options->Settings->Delete all contacts**
2. Choose whether you want to delete the contacts from the SIM card or from the phone's memory and confirm by pressing Yes.

## **6.4 *Copying contacts***

### **6.4.1 *Copy a single contact***

To copy contacts from the SIM card to the phone or from the phone to the SIM card:

1. From the MENU, select Contacts
2. Select the contact you want to copy
3. Press Options->Copy, then select where you want to copy the contact and press the green handset key.

### **6.4.2 *Copying multiple contacts***

To copy several contacts from the SIM card to the phone or from the phone to the SIM card:

1. In the MENU, select: **Contacts->Options->Settings->Copy All**
2. Choose where and where you want to copy the contacts from.
3. Select the contacts you want to copy by pressing the green handset key. If you want to copy all contacts, choose Options->Select All  
Press Options->Copy Selected.

## **6.5 Transferring contacts**

You can transfer contacts from SIM card to phone memory or vice versa. To do this, select MENU->Contacts->Options->Settings->Transfer All. Proceed in the same way as when copying several contacts (pt. 6.4.2).

## **6.6 Blacklist**

If you don't want to receive calls from a contact, you can blacklist them. Select the contact you want, then press Options>Add to Blacklist>Yes. For more information, see 12.5.5

## **6.7 Select a few**

In the MENU, select: Contacts->Options->Select a few and then:

- Send SMS if you want to send an SMS to several recipients
- Delete a few, if you want to delete several contacts, see pt. 6.3.2

## **6.8 Phone Book Settings**

### **6.8.1 Dialling**

In the MENU, select: Contacts->Options->Settings->Simple Dial.->Status to enable or disable speed dialing. If speed dialing is enabled and keys 2-9 are assigned numbers, holding down the corresponding key will connect you to the stored number.

To assign a number to a key, in the MENU, select Contacts->Options->Settings->Simple Dial.->Set Keys.

Then select which key you want to assign the number to, press the green handset key, select the number from your contact list and press the green handset key again.

### **6.8.2 *Memory Status***

This option allows you to check the memory status of the card and the phone.

In the MENU, select ->Contacts->Options->Settings->Memory Status

## **7. Connection**

### **7.1 Direct dialing**

1. Enter the phone number you want to call

For international calls, it is required to enter "00" or "+" before the number. To enter "+" press the "" key twice\*

2. Press the green handset to call the number you dialed
3. To end a call, press the red handset.

### **7.2 Dial a number from the phone book**

In standby mode, press the right key of the red handset to enter the phone book. Use the UP/DOWN buttons to select the correct contact. If you want to quickly jump to a contact that starts with the letter U, for example, press

the 8 key twice. To make a call to a selected contact, double-press the green handset.

### **7.3 Dial numbers from the recent calls list**

Press the green handset when the phone is in standby mode to go to the recent call list. Use the UP/DOWN keys to navigate through the call list. Press the green handset>Connect>Green handset to make a call.

### **7.4 Speed Dial**

If you have previously assigned contacts to keys 2-9, in standby mode, press and hold the corresponding key to make a call.

### **7.5 Change the call volume**

While you're on a call, press the Up or Down key to increase or decrease the call volume.

### **7.6 Options during a call**

To turn on speakerphone, press Options>Speaker while you're on a call. To turn off speakerphone, press Options>Phone.

While on an ongoing call, press Options to enable additional features:

- Hold: Puts the connection on hold
- End Call: Ends the call
- Contacts: Go to Contacts, for example, to check your number
- Call log: Check your call log
- Messages: Allows you to check received/saved messages

- Voice recorder: Starts call recording
- Mute: Turns the microphone on/off
- Volume: Change the volume of the call

## 7.7 Answering calls

To answer an incoming call, press the green handset.

To reject an incoming call, double-press the red handset.

To silence an incoming call, press the red handset.

## 8. List of calls

To enter the call log, go to the main MENU and select Call Log, and then select:

**Missed calls** (to view missed calls). If you have not answered a call, the handset symbol will be displayed at the top left of the screen in standby mode.

**Dialed numbers** (to display the numbers you dialed).

**Answered calls** (to view answered calls)

**All Calls** (to view all calls)

**Delete log** (to delete call history)

**Call Counter** (to check call times, etc.)

To check the call details (duration, number of calls, etc.), press Options>Preview

Note: To view the call log, simply press the green handset in standby mode.

Coloured symbols indicate the type of connection.

Once you have selected the correct connection, press the green handset key to display additional options:

- **Preview**, allows you to see the details of the call, e.g. date and time of the call, time of the call, etc
- **Call**, makes a call to the number
- **Preview**, allows you to check the details of the call
- **Send SMS**, allows you to send SMS
- **Save to contacts**, allows you to add a number to your phonebook
- **Add to blacklist**, allows you to add a number to the block number list
- **Delete**, deletes the item

## 9. SMS and MMS messages

Your phone allows you to send and receive SMS text

messages. When an icon appears on the screen , it means that there is at least one unread message.

To enter **the SMS MENU**, press the Down key in standby mode, and then select Messages->Receive (or in standby mode, press the Up key, then Receive).

When your inbox is full, the icon  will pulse. Delete messages from your inbox to fix the problem.

### 9.1 Texting and typing

1. Enter the MENU and then select: Messages->Compose Message to open the message editor.
2. Enter your message.

- **Change the typing method:** To change the typing method (numbers, uppercase or lowercase), press

the "#" key, if you want to type a symbol, press the "\*" key.

3. **Send a message:** Press **Options>Send to** and choose whether you want to enter the number manually or select from your contacts. Dial the number and press OK. If you want to send an SMS to multiple people, you can add additional numbers. To send a message, press **Options>Send**.
4. **Save messages:** To save the message you just wrote, press Options>Save. The message is saved in your Drafts folder. You can set the sent messages to be automatically saved, to do this go to the MENU and select: Messages->SMS settings->Save sent messages

## 9.2 Reading and replying to text messages

1. When the unread message icon appears on the display or you want to read received messages, select Messages->Receive Messages in the MENU. To read the message, press Options>Preview. While reading, you can use additional options by pressing the green phone key.
2. An icon next to a  message means that it is an unread message.

By pressing "Options" while reading the message, you will see additional functions:

- Reply: write an SMS to the sender
- Call: Connect to the sender
- Delete: deletes the message

- Forward: Forward the message to another recipient
- Advanced: allows you to use a USSD number or code

## 9.3 SMS mailboxes

### 9.3.1 *Inbox*

Shows messages received, sorted by the date they were received.

To navigate your inbox, use **the UP** and **DOWN** keys.

To view additional features, press "Options" while viewing your inbox:

- Preview: allows you to read the message
- Reply: write an SMS to the sender
- Call: Connect to the sender
- Forward: Forward the message to another recipient
- Delete: deletes the message
- Delete All: Deletes all messages from your inbox
- Save to contacts: Add the sender of the message to your contacts

### 9.3.2 *Items sent*

If you use the Save sent option, sent messages are then saved in the "Sent" folder.

To navigate your inbox, use **the UP** and **DOWN** keys.

### 9.3.3 *Drafts*

You can save unsent messages to your "Drafts" folder. To do this, write your message and after pressing the green handset, select "Save".

Go to Drafts to send, delete, or edit saved messages.

### 9.3.4 *Outbox*

If the message could not be sent, it will be saved in the Outbox.

## 9.4 Deleting messages

To delete a selected message, go to the options and select "Delete".

## 9.5 SMS settings

Go to MENU and select: Messages->Settings and then select:

- SIM

- **Profile>SMSC**: Acts as an intermediary between subscribers in sending SMS messages. To send an SMS message from a mobile phone, you need to have a valid SMS center number.

You will receive this number from your service provider.

- **Delivery Report**: You can set your phone to receive a return SMS that your SMS has been delivered to the sender (network service)

- **Message period**: determines the duration of the message

- **Message type**: Specify the type of message to send

- **Response path**: allows you to enable/disable the response path

- **Voice-mail**: Set your voicemail server number

- SMS Blacklist

Allows you to add SMS senders to the blacklist (blocks messages from them)

- Memory Status

It allows you to check the storage status of the SIM card and the phone.

- Message counter

Allows you to check the number of messages sent/received

- Save sent messages

Allows you to enable/disable the saving of sent messages

- Preferred memory

Allows you to choose whether to save messages to your phone or SIM card

## 9.6 Voicemail

Voicemail is an operator service that allows us to leave voice recordings when someone fails to connect with us. To find out more, contact your carrier. If you would like to change your voicemail number, in the MENU select: Messages->Settings->SMS->SIM->Voicemail and enter the correct number.

You can get a voicemail number from your service provider. To connect to voicemail, simply press and hold the  1 <sub>oo</sub>

## 10. Tools

### 10.1 SOS

If you don't have any SOS number set, you will be called to 112 when you hold down the SOS button.

You can set up five emergency numbers. When you press and hold the SOS button (located on the back of

the phone), the SOS function will be activated. The phone will trigger an alarm and automatically call the pre-set emergency contacts one by one. There will be three attempts to call each contact you set. The phone will ring the next contact if it fails to connect to the previous contact for 20 seconds.

If one of the emergency numbers answers the call, the phone turns on speakerphone mode and ends the SOS procedure.

If none of the preset numbers answers the call, the phone will automatically send an emergency SMS to the preset numbers (if the feature is enabled), display what the owner is sick with, and remain in the emergency state for one hour, i.e. the first incoming call will be automatically answered in hands-free mode. To turn off SOS mode, hold down the SOS key.

#### ***10.1.1 Entering, deleting, modifying emergency contacts***

You can select up to 5 emergency numbers.

Make sure your emergency contacts always answer the call or have voicemail turned off. Otherwise, once voicemail is activated on the emergency number, the SOS procedure will be terminated.

To quickly set an emergency contact, enter the main MENU. Then select: Tools->SOS->SOS Numbers.

Select which item you want to change, press Options, and select:

**Edit** to change an emergency number that has already been stored or to enter an emergency number manually.

**Contacts**, to add a new emergency number from your contacts, after selecting the correct number, confirm by pressing OK.

Type manually to enter the emergency number manually

**Delete** to delete an emergency number that has already been saved

### **10.1.2 User Information**

In the MENU, select Tools->SOS.->User Info to set the most important data about the user, e.g. diseases, allergies, etc.

### **10.1.3 Alarm text**

You can change the text of the text message that is sent during an emergency call. By default, the text is entered: "*Emergency SMS! Call me*" To change the content of the SOS message, in the MENU select Settings->Tools->SMS SOS. Enter the correct text and press OK.

You can enable or disable the sending of SOS messages in emergency mode. To do this, select in the MENU: Tools>SOS->Sending messages. SOS BUTTON

### **10.1.4 Disable the SOS alarm**

You can turn on/off the emergency sound when making an SOS call. To do this, select in the MENU: Tools->SOS->SOS Alarm.

### **10.1.5 SOS alert volume**

You can set the alarm volume during an active SOS routine. To do this, select in the MENU: Tools->SOS->Alert volume.

### **10.1.6 SOS button**

You can turn the SOS button on or off. To do this, select the SOS button in the MENU: Tools->SOS->On/off button.

### **10.1.7 Low battery alert**

If enabled, your phone will send a low battery information to your emergency contacts.

## **10.2 Calendar**

To enable the calendar function, in the MENU select: Tools->Calendar.

To move between days, use the Up/Down/2/8 key.

Press the green earbud key for additional options:

- Go to date: enter the date you want to go to
- Go to today's date: allows you to go to the current date in the calendar,

## **10.3 Calculator**

To turn on the calculator, in the MENU select: Tools->Calculator. The following mathematical operations are possible: addition, subtraction, multiplication and division.

Enter the first number using the 0-9 keys, then use UP/DOWN to select the action and enter the next number. Press OK.

## **10.4 Alarm**

You can set five independent alarms on your phone. To activate the alarm in the MENU, select: Tools->Alarm. Select the appropriate alarm and press Edit. You can turn on/off the alarm, set the alarm time, alarm type, and repeat. If the phone is turned off, the alarm function will continue to work if the battery condition allows it. If the alarm goes off, press the green handset key to turn off the alarm clock. Press the red handset key to turn on the snooze function, the alarm will sound again in 5 minutes.

## **10.5 Flashlight**

You can turn on/off the flashlight using the 0 (zero) key. In standby mode, press and hold the 0 key until prompted.

## **10.6 SIM services**

Regardless of the features of the phone itself, the SIM card can offer additional services. The name and functions of this menu depend on the type of services available.

Services that require an Internet connection may not be available.

# **11. Multimedia**

## 11.1 Audio Player

Using an audio player, you can play the recorded audio files. They must be in the My Music folder. If you have recorded new files, select Options->Refresh List" when you start the Player. To start or pause playback, press 5. If you do not want the files to play in the background, stop playback by pressing 5 before exiting the player. You can move between the previous and subsequent recordings using the 4 and 6 keys. To change the playback options, select: Options->Settings. You can adjust the volume using the \* and # keys. The phone plays the following file formats: WAV, AAC, AMR.

## 11.2 Voice Recorder

You can record music or ambient sounds. Due to the limited internal memory of the phone, the use of a memory card is required.

- Select in the MENU: Multimedia->Voice recorder
- To start or pause the recording, press the Up key.
- To end the recording, select the DOWN key.

By default, recordings are saved in the File Manager->Phone->Audio folder.

◎Select **Options** to make the appropriate settings for the recorder (recording list, file storage location, recording quality).

## 11.3 Radio FM

The phone has a built-in FM radio receiver. You can use it by plugging in a headset that also acts as an antenna.

**Warning: The** quality of the pickup depends on where you are. The reception of radio stations is affected by many external factors that can cause poor reception quality, but this is not the basis for a complaint about the goods.

To turn on the radio, select in the MENU:

Multimedia>FM Radio. To turn the radio on/off, press the 5 key. If Play in Background is enabled, use the 5 key to stop the radio from playing, and then press the red handset. Otherwise, the radio will continue to play. Button functions when playing radio:

- 6: Next saved station
- 4: Previous saved station
- TOP: search for the next available station
- BOTTOM: search for the previous available station
- #: louder
- \*: Quieter
- Red handset: back to menu

## 11.4 File Manager

Select in the MENU: Multimedia->File Manager

Press the left function key [Options] :

- Open- select to open the selected folder.
- Format- to format the selected drive
- Details

After opening the folder, the following options are available under the green phone key:

- Open
- Create Folder - to create a new folder in the selected location
- Rename a folder
- Delete: Delete the current folder

## **12. Settings**

Select Settings in the MENU, then:

### **12.1 Profiles**

The phone has several profiles with which you can quickly adapt your phone to different situations. Each of the profiles can be activated and customized according to your needs. Profiles are available: General, Quiet, Meeting, Outdoor, Energy saving

In each profile, you can use the Customize option to change:

- Alert type (ringtone only, vibration only, etc.)
- Ring type (single or repeated)
- Ringing tone
- Ringer
- Message Signal
- Message signal volume
- Keyboard sound
- Key volume
- Sound of warnings (e.g. low battery)

In standby mode, press and hold the # key to turn on the meeting profile, hold the # key again to go back to the previous profile.

## **12.2 Phone settings**

### **12.2.1 Date and time settings**

To set the date and time, select in the MENU: Settings->Set. phone->Time and date. Select "Time Zone" to set the correct city, then "Set Time/Date" to enter the time and date. Use the Up/Down keys to move between the date and time, and use the 0-9 buttons to enter the date and time.

You can also set the time format (12h or 24h), date format (DD/MM/YYYY, MM/DD/YYYY or YYYY/MM/DD).

If the battery is removed from the phone, you will need to set the date and time when you put it back in (if it is not automatically drawn from the mains).

The Update when changing time zone option allows you to enable/disable the automatic time update function when you change time zone.

The Automatic time update option allows you to set whether the time is set automatically, after confirmation, or not at all when you turn on your phone.

### **12.2.2 Automatic phone on/off**

In the menu>Settings>Set. phone> Plan your cars. On/Off you can set the times when you want your phone to automatically turn off and on.

NOTE, if you have set a PIN or security code for your phone, your phone will not be fully automatically turned on.

### ***12.2.3 Language***

Allows you to change the language of your phone's menu. If you accidentally set a foreign language to change to the correct one, press in standby mode:

- 1x BOTTOM
- 2x TOP
- 1x OK
- 1x BOTTOM
- 1x OK
- 2x BOTTOM
- 1x OK

select the correct language and press OK.

### ***12.2.4 Preferred input method***

Set the mode in which you want to enter text by default: Abc, abc, ABC, PL, Pl, 123, etc.

### ***12.2.5 Display***

You can set the wallpaper and enable/disable the function of displaying the clock, date and operator name in standby mode.

### ***12.2.6 Airplane mode***

You can turn on airplane mode. When it is active, the phone is not connected to the GSM network, it is impossible to make calls, send/receive messages, etc.

## **12.2.7 Screen backlight**

Select Settings>Set. Phone>Other Settings>Backlight to set the brightness and backlight time of the display.

## **12.3 Security settings**

### **12.3.1 Pin**

You can enable/disable PIN code request when starting the phone and change the PIN code

### **12.3.2 Phone security**

You can enable phone lock. When you turn on your phone, you will need to enter the lock code. The default code is 1122.

### **12.3.3 Data security**

You can restrict access to certain data, e.g. contacts, messages, to unauthorized persons. The default code is 1122.

### **12.3.4 Automatic keypad lock**

The function allows you to turn on and set the time after which the keyboard will be automatically locked.

## **12.4 Network settings**

- Network selection: You can choose a carrier manually or automatically for each SIM card.
- Pref. GPRS transfer, you can set the priority of GPRS transmission

### **12.4.1 Dual SIM settings**

If you have two SIM cards inserted in your phone, you can disable one of them.

### **12.4.2 Bluetooth**

With Bluetooth connectivity, you can send and receive files. You can also connect other devices such as a wireless headset.

Select in the MENU: Settings->Bluetooth

In the Bluetooth menu, you can choose one of the following options:

Bluetooth Status	Turn Bluetooth on or off
Visibility	Turn on so others can find your phone
My Devices	Devices you've connected to before
My Name	Choose the name of your device

Files transferred to mm426 are saved in the Received folder. A memory card must be installed in the phone.

## **12.5 Call settings**

### **12.5.1 Hiding a number**

It is a network service. If your operator offers this service, you will need to configure it accordingly. This feature allows you to hide your own number during a call.

Select "Sets Network", "Hide Number" or "Send Number" and press "Ok".

## 12.5.2 *Call waiting*

It is a network service. If your operator offers this service, you will need to configure it accordingly.

After entering the MENU option: Settings->Set. Calls->Call waiting, you can check the availability status and choose whether you want to activate this feature.

If call waiting is enabled and you are on a call, each subsequent incoming call will be indicated by a second call that emits. It is possible to answer the second call and put the first one on hold.

## 12.5.3 *Call forwarding*

It is a network service. If your operator offers this service, you need to configure it accordingly. The user can set up incoming calls to be forwarded directly to voicemail or to another number of their choice.

1. To set up the Call Forwarding service, go to the MENU: Settings->Set Calls->Call Forwarding.
2. Then choose when you want to forward calls from the available list: **1 All voice calls** (Forwards all incoming calls to a selected number), **2 When unavailable** (Forwards calls when your phone is turned off or out of range), **3 When not answering** (Forwards incoming calls when you don't answer the phone), **4 When busy** (Forward incoming calls while you are currently on a call), **5 Transfer all data calls**, **6 Cancel all transfers**.
3. Press **Activate** and type the number you want to forward calls to to activate the service or **Disable** to disable the service.

To check what the currently selected service status is, select **Check Status**

#### **12.5.4 Call Blocker**

It is a network service. If your operator offers this service, you will need to configure it accordingly. This feature allows you to block different types of connections.

1. Go to the MENU to:

Settings->Set. Calls->Call Blocker

2. From the list, select the type of calls you want to block. You can block all outgoing calls, all outgoing international calls, international calls (except calls to your home), all incoming calls, and incoming calls while roaming. You can also change the lock password.

#### **12.5.5 Advanced settings**

- **Blacklist:** You can add any number to the blacklist. If the incoming call blocking feature is enabled, any call from a blacklisted number will be automatically rejected.
- **Autorepeat:** If the feature is enabled, when a call attempt fails, your phone will automatically try to re-establish the call
- **Time reminder:** You can set the call duration indication. Every specified time or after a certain time, you will hear a tone during the call notifying you that a certain amount of time has passed.

- Answer calls: You can set calls to be answered by pressing any key or automatically when a headset is connected.

## 12.6 Factory reset

With this option, you can perform a factory reset. Select in the MENU:

Settings->Restore factory settings., and then enter your security password. Finally, confirm with the green handset key.

**Warning:** The default security password is: 1122

## 13. Connecting to a computer

You can connect your phone to your computer with a USB cable, so you can copy and transfer files between your phone and computer

Connecting:

- insert the USB cable into the phone
- Plug the other end of the cable into a port on your computer
- The following messages will be displayed on the phone screen: "Storage devices" and "COM port". Select Storage Devices

## 14. FAQ (Troubleshooting)

Repairs of the phone can only be carried out by an authorized service center. Do not carry out repairs or alterations yourself or void your warranty!

"Unable to connect"	<p>Check that the number you are dialing is correct. When dialing a number of another country, always add the appropriate prefix (e.g. Germany 0049 or +49)</p> <p>If you have a prepaid card, you will need to check if you have funds available in your account to make the call.</p>
"SIM card is inserted, only emergency calls can be made (112)"	Make sure that the SIM card is installed correctly. Check if the SIM card is not disabled in the phone menu.
The phone does not work, when I plug in the charger it does not charge	Your phone may be turned off, you should turn on the phone by pressing the power button (red handset) for about 3 seconds. After not using the phone for a long time, the battery may be in a state of so-called "deep discharge", to restore proper operation, the charger should be left plugged in, even though nothing appears on the display.
"Is it possible to make calls while abroad?"	If the user is outside the country, the phone automatically logs in to the foreign network if ROAMING is enabled. Check with your operator.
"Is it possible to make an emergency call in a place where there is no coverage or when there are no funds in the account?"	<p>You cannot make any call if your phone is not within range of the network.</p> <p>If you do not have funds in your account, you can make emergency calls to 112.</p>

"How can you increase your reach?"	If the display says "Not working", it means that there is no signal or funds in your account. However, in this case, it is possible to make emergency calls to 112 provided that we are within the range of another operator's network. Places such as buildings limit the range, you should get closer to the window or go outside the area with many buildings.
"The display shows "Press the green handset", the keys do not work."	Keypad lock is enabled, you should. Unlock the keyboard by pressing the green handset key and then * (asterisk)
"What is SMS message center?"	The operator center number where text messages are stored. The number is stored on the SIM card, but you can change it and enter a different one in the phone menu.
"When am I charged for a call?"	You are charged as soon as the connection is established. Check with your operator about the billing method.
How to check if the SMS has reached the recipient?	Enable Delivery Report. After the message is delivered, a return SMS will be sent to inform you that the message has been delivered (network service).

## 15. Terms of Use and Safety

- Do not turn on your phone if it may cause interference with other devices!
- Do not use your phone without the correct kit while driving.
- Your phone emits an electromagnetic field that can have a negative impact on other electronic devices,

including medical equipment. Keep the distance between the phone and the implanted medical device, such as a pacemaker, as recommended by the manufacturers of medical equipment. People with implanted devices should read the guidelines of the manufacturer of the implanted medical device and follow these guidelines. People with a pacemaker should not carry the phone in a breast pocket, hold the phone to their ear on the opposite side of the body to the medical device to minimize the risk of interference, and turn off the phone immediately if they suspect interference;

- Do not use your phone in hospitals, airplanes, gas stations or near flammable materials.
- You must not make repairs or alterations on your own. Any defects should be removed by a qualified service provider.
- The device and its accessories may consist of small parts. Keep your phone and its components out of the reach of children.
- The phone must not be cleaned with chemical or corrosive substances.
- Do not use your phone in close proximity to payment and credit cards – this may result in the loss of data on the card.
- For safety reasons, please do not talk on the phone with the wall charger plugged in.
- The phone is not waterproof, and it should not be exposed to water or other liquid substances.

- Do not place the appliance where it can be splashed with water or any other liquid.
- Do not expose the device to cold and high temperatures and direct sunlight. Do not place the appliance near the heating system. e.g. radiator, heater, oven, central heating stove, campfire, grill, etc.
- Protect your hearing Prolonged exposure to loud noises can lead to hearing damage. Listen to music at a moderate level and do not hold the device close to your ear when using the speaker. Always turn the volume down before connecting headphones.

## 16. Warranty conditions

The phone comes with a warranty, which is an integral part of the proof of purchase.

Damage resulting from misuse, electrostatic discharge or lightning strikes will not be remedied free of charge under the Warranty. If the user has attempted to repair or modify it on their own, it voids the warranty!

The above information is provided for your reference.

## 17. Battery Information

The phone has a battery that can be recharged using the charger included in the set.

The operating time of the phone depends on different operating conditions. The shorter operation is significantly influenced by how far we are from the relay

station and the length and number of conversations. While moving, the phone switches between relay stations on an ongoing basis, which also has a large impact on the operating time.

After several hundred charges and discharges, the battery naturally loses its properties. If you observe a significant loss of performance, you should get a new battery.

Only use and disable rechargeable batteries recommended by the manufacturer. Do not leave the charger plugged in for more than 2-3 days.

Do not keep your phone in places with too much heat. This can have a negative impact on the battery and the phone itself.

Never use a battery pack with visible damage. This can lead to a short circuit and damage to the phone. The battery should be inserted in the correct polarity.

Leaving the battery in places with too much or too little temperature will reduce its life. Store the battery at a temperature between 15°C and 25°C. If a cold battery is inserted in the phone, the phone may not work properly and there may be a risk of damage.

A rechargeable battery is included Li-ion. Used batteries are harmful to the environment. They should be stored in a specially designated point, in an appropriate container, in accordance with



applicable regulations. Batteries and accumulators must not be disposed of in municipal waste, they must be taken to a collection point.

**BATTERIES AND ACCUMULATORS MUST NOT BE DISPOSED OF IN FIRE!**

## **18. SAR Information**

This model meets international guidelines for radio frequency interactions. This device is a transmitter and receiver of radio waves. It is designed not to exceed the limits of radio frequency exposure recommended by international guidelines. These guidelines have been developed by the independent scientific organization ICNIRP with a safety margin in mind to guarantee protection for all people regardless of age and health. These guidelines use a unit of measurement called Specific Absorption Rate (SAR).

The ICNIRP SAR limit for mobile devices is 2.0 W/kg. The SAR value is measured at the highest transmitting power, the actual value during operation of the device is usually lower than the above-mentioned level. This is due to the automatic changes in the power level of the device to ensure that the device uses only the minimum required to connect to the network.

While there may be differences in SAR values for different phone models and even for different usage positions, they all comply with regulations for safe radiation levels.

The World Health Organization stated that current research has shown that there is no need for any special restrictions on the use of mobile devices. He

also points out that if you want to reduce the impact of radiation, you should limit the length of conversations or use a headset or speakerphone during the conversation so as not to hold the phone close to your body or head.

Highest measured SAR value in tests	
SAR – device next to the head	0.581W/kg (GSM900) 0.590 W/kg (GSM1800)
SAR – device next to the torso	0.820 W/kg (GSM900) 0.515 W/kg (GSM1800)

SAR values may also vary depending on national reporting and testing requirements and the frequency band of the network

## **19. Frequency range and maximum radio frequency power**

System	Frequency range	Maximum emitted power
GSM900	880-915 MHz(TX); 925-960 MHz(RX)	32.95dBm
GSM1800	1710-1785 MHz(TX); 1805-1880 MHz(RX)	29.33dBm
Bluetooth	2402-2480 MHz	2.24 dBm EIRP
Radio FM	87.5MHz -108MHz	-

## **20. Charger - technical data**

The external power supply for your phone complies with  
Commission Regulation (EU) 2019/1782

MAXCOM S.A. KRS: 0000410197  
Towarowa 23A, 43-100 Tychy

Model ID	TRAVEL CHARGER DCS37-0500550
Input voltage	AC 100-240V
AC Input Frequency	50/60Hz
Output voltage	DC 5.0V
Output	0.55A
Output Power	2.75W
Average operating efficiency	70.35%
Efficiency at low load (10 %)	-
No-load power consumption	0.075W



The power supplied by the charger must be between the minimum 0.75W required by the radio equipment and the maximum 10W to reach the maximum charging speed.

## 21. Environmental Information



**Note:** This appliance is marked in accordance with the European Directive 2012/19/EU and the Polish Act on Waste Electrical and Electronic Equipment with the crossed-out waste container symbol.

Such marking informs that this equipment, after its period of use, cannot be placed together with other household waste.

**Note:** this equipment must not be disposed of in municipal waste!! The product should be disposed of

through selective collection at points prepared for this purpose.

Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment resulting from the presence of hazardous components and improper storage and processing of such equipment.

## **22. Declaration of Conformity**

Maxcom S.A. hereby declares that the type of radio equipment:

mobile phone MAXCOM MM426  
complies with Directive 2014/53/EU, and Directive 2011/65/EU (RoHS)

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.maxcom.pl/deklaracje>

**Some of the information in this guide may vary depending on how your phone is configured. It depends on the software you have installed, your service provider, and your SIM card. The right to make changes to the product and its functions is reserved without prior information.**

**Technical support:**

**Tel: +48 32 325 07 00 or email [serwis@maxcom.pl](mailto:serwis@maxcom.pl)**

**MAXCOM S.A.  
43-100 Tychy,  
Towarowa 23a  
POLAND**

**tel. +48 32 327 70 89  
fax +48 32 327 78 60**

**[www.maxcom.pl](http://www.maxcom.pl)  
[office@maxcom.pl](mailto:office@maxcom.pl)**

**UK** **CA** **CE**