

**User manual
Mobile phone
Maxcom MM718**



Reading this Manual prior to using the phone is highly recommended.

The set includes

Mobile phone

USB cable

Battery

User Manual

Warranty card

Keeping the package is recommended as it might be used for transport.

Keep the receipt as it required for warranty.

Important – The phone works in the following networks:

GSM: 900/1800 MHz;

WCDMA: 900/2100 MHz;

LTE band: 800/900/1800/2100/2500/2600 MHz.

Prior to switching on the phone, a SIM card must be correctly installed.

Contents:

1	Introduction.....	6
2	Accessories	6
3	Safety precautions.....	6
4	Emergency call (112).....	7
5	Basic information	8
6	Phone preparation	10
6.1	Removing the battery cover	10
6.2	SIM card installation	10
6.2.1	<i>SIM1</i>	10
6.3	Memory card installation	11
6.4	Battery installation	11
6.5	Connecting the AC adapter and charging battery	11
6.5.1	<i>Low battery warning</i>	12
6.6	Switching on and off the phone	12
7	Display description	13
7.1	MENU operation.....	13
7.2	Keyboard lock.....	14
7.2.1	<i>Automatic keypad lock</i>	14
7.3	Entering text	14
8	Phone book	14
8.1	Saving contacts	14
8.2	Browse contacts	15
8.3	Deleting contacts.....	15
8.3.1	<i>Deleting a single contact</i>	15
8.3.2	<i>Deleting several contacts</i>	15
8.3.3	<i>Deleting all contacts</i>	15
8.4	Copying contacts.....	15
8.5	Speed Dial.....	16
8.6	Memory status.....	16
9	Calls.....	16
9.1	Dialing calls	16
9.1.1	<i>From the numeric keypad</i>	16
9.1.2	<i>From the phone book</i>	16
9.1.3	<i>From the call log</i>	16
9.2	Adjust the call volume	16
9.3	Options during a call.....	17
9.4	Incoming calls.....	17

10	Call logs.....	17
11	SMS and MMS messages	18
11.1	Writing and sending SMS and MMS	18
11.2	Reading and replying to SMS and MMS	19
11.3	SMS boxes	19
11.3.1	<i>Inbox</i>	19
11.3.2	<i>Outbox</i>	20
11.3.3	<i>Drafts</i>	20
11.3.4	<i>Sentbox</i>	21
11.3.5	<i>Security inbox</i>	21
11.4	Deleting messages.....	21
11.5	Message settings	21
11.5.1	SMS	21
11.5.2	MMS.....	21
11.6	Voicemail.....	22
12	Multimedia	22
12.1	Audio player	22
12.2	Image	22
12.3	Video	22
12.4	Recorder.....	22
13	FM radio	23
14	Application.....	23
14.1	Bluetooth	23
14.2	Torch	23
14.3	Alarm	23
14.4	Calendar.....	24
14.5	Calculator	24
14.6	STK (SIM services)	24
14.7	My favorite.....	24
14.8	World clock.....	24
14.9	Unit conversion.....	25
15	Settings.....	25
15.1	Profiles	25
15.2	Phone settings.....	25
15.2.1	<i>Time & data</i>	25
15.2.2	<i>Language settings</i>	25
15.2.3	<i>Shortcut settings</i>	26
15.2.4	<i>Auto power on / off</i>	26

15.2.5	<i>Power management</i>	26
15.2.6	<i>Restore factory settings</i>	26
15.3	<i>Call settings</i>	26
15.3.1	<i>Call divert</i>	26
15.3.2	<i>Call waiting</i>	27
15.3.3	<i>Call barred</i>	27
15.3.4	<i>Caller ID</i>	27
15.3.5	<i>Others</i>	27
15.4	<i>Connections</i>	27
15.5	<i>Display</i>	28
15.6	<i>Security</i>	28
15.6.1	<i>PIN</i>	28
15.6.2	<i>Modify PIN2</i>	28
15.6.3	<i>Phone locked</i>	28
15.6.4	<i>Modify the cellphone password</i>	29
15.6.5	<i>Privacy</i>	29
15.6.6	<i>Lock screen by end-key</i>	29
15.6.7	<i>Fixed dialing number</i>	29
15.6.8	<i>Blacklist</i>	29
15.7	<i>Number sound</i>	29
15.8	<i>Themes</i>	29
15.9	<i>Check update</i>	29
16	<i>Internet</i>	29
17	<i>Connection to a computer</i>	30
18	<i>FAQ (Troubleshooting)</i>	30
19	<i>Technical Specifications</i>	32
19.1	<i>Main functions:</i>	32
19.2	<i>AC Adaptor</i>	32
19.3	<i>Operating Frequency Range and Max Conducted Power</i>	33
19.4	<i>SAR information</i>	34
20	<i>Battery Information</i>	35
21	<i>Protect your environment</i>	35
22	<i>SIMPLIFIED EU DECLARATION OF CONFORMITY</i>	36
23	<i>UK DECLARATION OF CONFORMITY</i>	36

1 INTRODUCTION

Thank you for choosing the Maxcom telephone.

This User Manual has been published by the Manufacturer. Corrections and amendments arising from errors and inaccuracies in current data and from the phone or software improvements might be made without prior notifications; they will be, however, included in updates versions of user manuals. To learn more go to: www.maxcom.pl/en. The Manufacturer reserves their rights to any and all content of this Manual.

Copyrights and trademarks mentioned in this document remain the property of their owners. Copying, transferring, storing, or dissemination of the materials, in whole or in part, covered by the copyrights, without a prior written consent of their authors, is prohibited.

2 ACCESSORIES

Use only batteries, chargers, and accessories recommended by the Manufacturer of this phone. Check their availability in your point of sale.

3 SAFETY PRECAUTIONS

Reading the guidelines below will minimize the risk of misusing the phone.

USING – The telephone emits electromagnetic field that might negatively interfere with other electronic devices including medical equipment.

Never use the phone in any area where the use of mobile phones is prohibited such as hospitals, refueling points, or in proximity to flammable materials. Using phones in such places might expose others to danger.

Never use the phone while driving.

A device and its accessories might contain small parts. Keep the phone and all parts out of reach of children.

SERVIS – Any repairs or modifications of the phone on your own are not allowed. Any issues should be taken care of by qualified service only.

CLEANING – Never clean the phone with any chemicals or corrosives.

HEARING AID – If the User has a hearing aid, adjust the phone volume and the hearing device sensitiveness carefully.

ELECTRONIC MEDICAL EQUIPMENT – The telephone is a radio transmitter that might negatively interfere with electronic medical devices

such as hearing aids, heart pacemakers, and insulin pumps, etc. A distance between the phone and the implanted device should be at least 15 cm. To learn more, contact your health care provider or manufacturers of such equipment.

WATERPROOF – The phone is not waterproof. Keep it dry at all times.

DUSTPROOF – The phone is not dustproof. Never use the phone in a place with increased concentration of dust. Protect the phone against metal chips that might cause the phone to malfunction.

DISPLAY SCREEN – Excessive pressing on the LCD screen and using sharp tools should be avoided as it might cause the screen to be damaged.

Never press the battery contacts with metal objects as doing so might cause an explosion.

Never expose the phone to either low or high temperature, direct sunlight, and high humidity. Never place the phone next to heating devices such as radiators, heaters, ovens, furnaces, camp fires, barbecue, etc. Maximum temperature 40 °C.

Protect your hearing! Prolonged exposure to loud sounds might damage your hearing. Listen to music at a moderate level, and do not keep the phone too close to an ear, while using a speakerphone. Lower the volume prior to using headphones.

4 EMERGENCY CALL (112)

To call the emergency number (112), you should:

Switch on the phone in a place with sufficient reception.

Enter the emergency number 112 and confirm the call with the green headset key.

Important! While making a phone call, you are required to give all information to the emergency response officer. Never hang up prior to answering all relevant questions!

5 BASIC INFORMATION




1	Call speaker	Active during conversations
2	Display	It displays ongoing processes on the phone in real time
3	Navigation key up / down / left / right	To navigate through the displayed content on the display. During a conversation: up increases and down decreases the volume. Press in standby mode: shortcut to selected functions.
4	OK key	Press in standby mode: Menu. Press in Menu: confirm selected option.
5	Left function key	Performs the tasks described in the lower left corner of the display
6	Right function key	Performs the tasks described in the lower right corner of the display

7	Green handset	Answering incoming calls / call logs
8	Red handset	Press: reject / hang up calls, exit to desktop Press and hold: turn the phone on / off
9	Key 2 / ICE	ICE Menu „In case of emergency“ is information for help who to call in case of emergency. Pressing and holding the key 2 ICE displays Contacts and the User information. The abbreviation ICE is recognized by the first responders everywhere in the world and allows them to get information about the User, therefore it is recommended to complete the Emergency Contacts info.
10	Numeric keypad	Allows you to enter numbers / characters Press: enter the number 0÷9. Key 1 – press and hold to call your voicemail. Key 3÷9 – press and hold to call previously programmed speed dial number. Key * – entering characters: *, +, P, W. When editing text, allows access to special characters. Key # – press and hold to quickly change the profile i.e. normal / silent / meeting. When editing text, allows to change input method.
11	Key 0	Press and hold to turn torch on / off.
12	Female USB-C socket	It allows to charge the phone's battery and connect it to a computer via a USB-C cable
13	Female Jack 3,5 mm socket	It allows to connect a headset
14	Opening the battery cover	
15	Microphone	
16	LED diode	Emitting white light
17	Lanyard holder	It allows to mount a lanyard
18	Speaker	Active for multimedia / ringtones
19	Battery cover	

6 PHONE PREPARATION

6.1 Removing the battery cover

Make sure the power supply is unplugged. In the lower right corner of the phone, gently pry the battery cover with your fingernail and remove it.

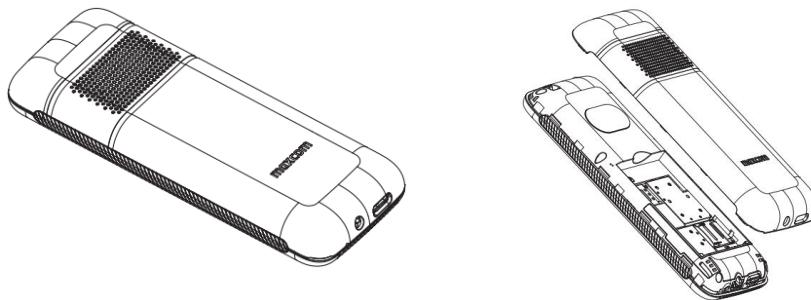

6.2 SIM card installation


Insert at least one SIM card into your phone before you start using it. You will receive a SIM card from your operator. Keep the SIM card out of the reach of children.

Any scratch or bend might easily damage the SIM card, therefore be extremely careful while inserting, removing and storing the SIM card.

6.2.1 SIM1

SIM1 slot are designed to install Nano SIM cards (4FF).

Insert the SIM card into the slot with the gold-plated connectors facing down and the beveled corner facing outside the phone.

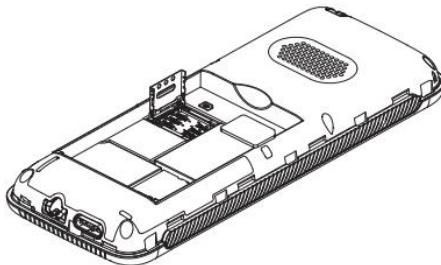


6.3 Memory card installation

Above the SIM1 slot there is a place for Micro SD (TF) memory card. Slowly slide the drawer outside the phone (OPEN) and open it. Place the memory card in the slot paying attention to the cuts. Close the drawer and slide it inside the phone (LOCK).





Be careful while using memory cards especially while inserting and removing the card. Some memory cards must be formatted on a computer before the first use.

Regularly make backup copies of data stored on cards used in other devices, if you use SD cards. Misuse or other factors might damage the card or make the card lose its content.

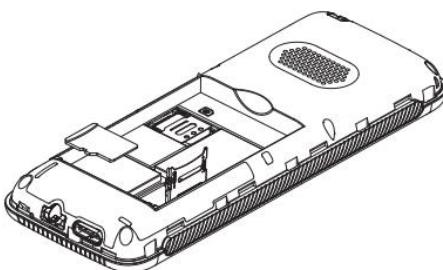


6.4 Battery installation

Insert the battery, make sure the + / - contacts face correctly, and then replace the battery cover.

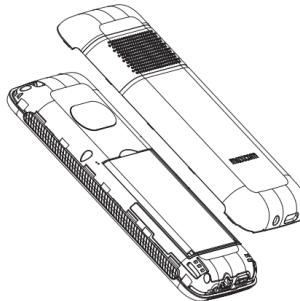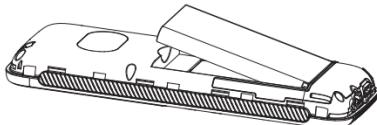

6.5 Connecting the AC adapter and charging battery

To ensure proper operation of the phone, use only the charger and battery recommended by the manufacturer. Using a battery from a third-party source may damage the phone and void the warranty.

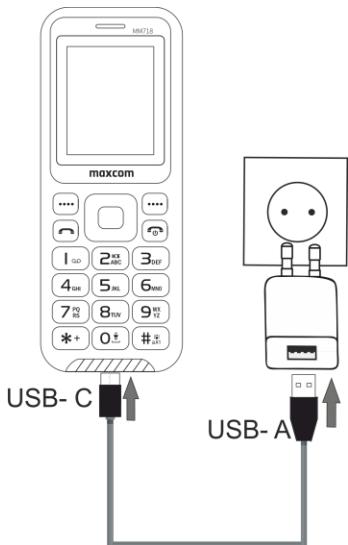

Connect the cable plug to the USB Type-C port on the phone and the other USB-A connector to the power supply. Plug the power adapter into a power socket.

The Maxcom logo and the charging battery icon will appear on the display. This will be a sign that the battery is properly connected and therefore the charging process has started.

When the battery is charged, the message „Charging complete” will appear on the display and the icon showing the battery charge level will stop flashing in the notification bar.

It is recommended to disconnect the charger after the charging process is completed, this will extend the battery life.

If the battery is discharged, the phone will automatically turn off. Do not leave the battery discharged for a long time, otherwise it may adversely affect its quality and service life.

6.5.1 *Low battery warning*

When the battery is low, the phone will alert you to the need to connect to charge with the message „Low battery” and with an acoustic signal (if warning sounds have been enabled in the profile).


6.6 *Switching on and off the phone*

To turn on the phone, press and hold the red handset key. After a while, the display should light up. After switching on, the display will show a field for entering the PIN code (if SIM card security is enabled). After turning on, the phone automatically searches for the network. If the phone detects an authorized network, the signal strength symbol will appear on the screen. If the network is not found, you can only make emergency calls or use non-communication functions.

To turn off the phone, press and hold the red handset key and then confirm by pressing the OK key.

7 DISPLAY DESCRIPTION

When the phone is turned on but no action is taken, it remains in standby mode.

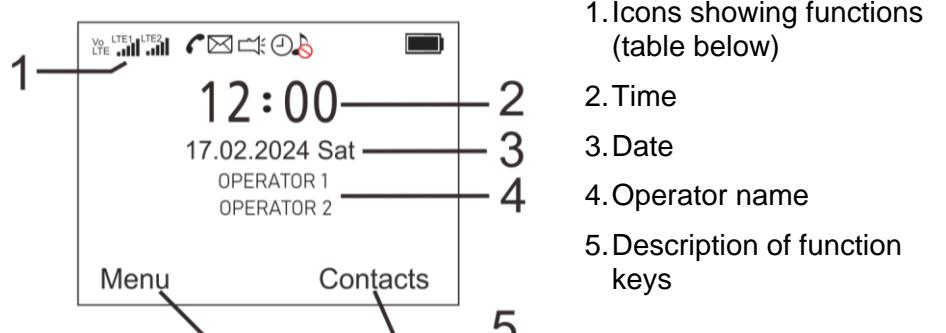

1	Icons showing functions (table below)	
2	2. Time	
3	3. Date	
4	4. Operator name	
5	5. Description of function keys	
 Network signal		No SIM card / SIM card error
 No services		Lack of coverage
VoLTE	VoLTE service	LTE
3G / G	3G / 2G coverage	
	New SMS / MMS	
	Vibration only (meeting profile)	
	Alarm active	
	Active „Outdoor” profile	
	Battery full	
Icons may vary depending on software version	* The  icon also appears in national roaming when the subscriber uses the network of another operator	

7.1 MENU operation

To enter the MENU, press the left function key in standby mode, according to the description displayed on the display.

To move through the MENU, use navigation keys.

To confirm the selected item, press the left function key „OK” or OK key.

7.2 Keyboard lock

To lock / unlock the keyboard, press the left soft key „Menu” / „Unlock” and then *.

During an incoming call, there is no need to unlock the keypad to answer the call.

7.2.1 *Automatic keypad lock*

To enable automatic keyboard lock, select: Menu > Settings > Display > Auto keypad lock. Then select the length of idle time after which the keyboard will be automatically locked and confirm the selection with the left function key „OK” or OK key.

7.3 Entering text

Press key # to change the input method. Available are:

- Abc – a capital letter after the dot,
- abc – small letters,
- ABC – big letters,
- 123 – numbers.

8 PHONE BOOK

8.1 Saving contacts

There are several options for creating and saving contacts, in stanby mode you should:

1. Select the number using the numeric keypad, then press the left soft key Options > Add to contacts. Now you need to choose whether the number is to be saved to a new or existing contact. Then select where to save the contact, in the phone memory or SIM card. After entering the contact name and any other information, press the left function key to confirm the creation of the contact „Save”.
2. Press the green handset or enter MENU > Call logs, then select one number using the navigation keys and continue as described above.
3. Press the right soft key to enter Contacts, then the left soft key Options > New contact, continue as described above.

For contacts that have been saved in the phone’s memory, you can set the selected ringtone individually for the contact.

8.2 Browse contacts

To view saved contacts, press the right soft key or Menu > Contacts in standby mode. You can scroll through the contact list using the up / down navigation keys.

8.3 Deleting contacts

8.3.1 *Deleting a single contact*

To delete a contact from the phone memory or SIM card:

1. Select Contacts,
2. Use the navigation keys to select the contact,
3. Press Options > Delete > OK.

8.3.2 *Deleting several contacts*

To delete several contacts from the phone memory or SIM card:

1. Select Contacts,
2. Press Options > Delete multiple,
3. Use the navigation keys to select a contact and press OK key,
4. Select all contacts you want to delete,
5. After selecting contacts, you need to confirm their deletion Options > OK > OK.

In case of a mistake, press OK key and then proceed as described above.

8.3.3 *Deleting all contacts*

To delete all contacts from the phone memory and SIM card:

1. Select Contacts,
2. Press Options > Delete multiple > Options > Mark all > Options > OK.

8.4 Copying contacts

To copy a contact from the phone memory to the SIM card or vice versa:

1. Select Contacts,
2. Press Options > Import/Export > Copy,
3. Press OK key and select from and to which memory the contacts will be copied,
4. Press Copy,
5. Press OK key to mark selected contacts to be copied,
6. Press Options > OK.

8.5 Speed Dial

On the numeric keypad, after pressing and holding keys 3÷9, a call will be made to the assigned number in standby mode. To assign a phone number to the appropriate key:

1. Select Contacts,
2. Press Options > Others > Speed dial,
3. Select the key to which the phone number is to be assigned,
4. Press Options > Edit,
5. Enter a phone number or select a number from Contacts,
6. Press OK to save.

8.6 Memory status

You can save up to 500 contacts in the phone's memory. To check the memory status, select Contacts > Options > Others > Memory status.

9 CALLS

9.1 Dialing calls

9.1.1 *From the numeric keypad*

1. Enter the number you want to call,
2. Press the green handset to make a call,
3. To end the call, press the red handset.

For international calls, you must enter „+” or „00” before the number. The „+” sign is available by pressing the key ***** twice.

9.1.2 *From the phone book*

In standby mode, press Contacts using the right soft key or select Contacts in the Menu. Use the up / down navigation keys to select a contact and press the green handset to make a call.

To search for a contact, use the numeric keypad. After selecting Contacts, enter a letter or several letters. Then select the appropriate contact and press the green handset to make the call.

9.1.3 *From the call log*

In standby mode, press the green handset or select Menu > Call logs > Missed / Dialed / Received / Rejected calls. Use the up / down navigation keys to select a contact or phone number, then press the green handset to make a call.

9.2 Adjust the call volume

During an ongoing call, you can increase / decrease the interlocutor's volume using the up / down navigation keys.

9.3 Options during a call

During an ongoing call, after pressing Menu, a list of functions will be displayed:

1. Connect to BT headset – ability to switch call playback via Bluetooth headset,
2. Add new call – ability to make another call,
3. On hold / Unhold (ongoing call),
4. Recording started / stopped – enable / disable recording of an ongoing call,
5. Mute / Cancel mute,
6. Adjust volume – ability to adjust the volume level of an ongoing call using the up / down navigation keys,
7. Contacts – possibility of entering Contacts,
8. Call logs – ability to check the call log,
9. Message – possibility of entering Messages.

To turn on hands-free mode, press OK key.

9.4 Incoming calls

To answer an incoming call, press the green handset or the left soft key.

To mute an incoming call, press the OK key.

To reject an incoming call, press the red handset or press the right soft key.

10 CALL LOGS

In standby mode, select Menu > Call logs, and then select:

1. Missed calls – list of missed calls,
2. Dialed calls – list of outgoing calls,
3. Received calls – list of received calls,
4. Rejected calls – list of rejected calls,
5. Delete all – ability to delete all recorded calls,
6. Call timers – counter storing information about call times,
7. Data service counter – counter storing information about transmitted and received data.

By pressing the green handset, the Call logs will open. The following symbols are used to distinguish the type of call:

-  – dialed outgoing calls,
-  – received incoming calls,

-  – missed incoming calls,
-  – rejected incoming calls.

To move through subsequent items, use the up / down navigation keys. In case of connections of the same type, you can check their number and time of registration.

After selecting one item, pressing Options with the left soft key will display an additional list containing it.

1. Details – connection details,
2. Call – making a call to the selected number,
3. Write message – ability to send SMS or MMS messages,
4. Add to contacts – ability to save the number in the phone book,
5. Add to blacklist – ability to add a number to the blacklist, which will result in blocking calls and text messages for this phone number,
6. Delete – ability to delete register,
7. Delete all – ability to delete all saved register,
8. Data service counter,
9. Mark.

11 SMS AND MMS MESSAGES

The phone allows you to send and receive SMS text messages and multimedia MMS. In standby mode, select Menu > Message.

11.1 Writing and sending SMS and MMS

There are two ways to enter the SMS sending function:

1. Press the right soft key Contacts,
2. Search for the contact you want to send a message to,
3. Press Options > Write message,
4. Write your message in the text box,
5. Press Options > Send or OK key.

or

1. Press Menu > Message > Write message,
2. In the upper text field, enter the phone number, contact name, or add a contact from the book by pressing OK key. If the message is to be sent to several numbers, they must also be marked and then confirmed by selecting Options > OK,
3. Press the down navigation key to move to the text box where you can enter your message,

4. Press Options > Send or OK key.

The list of additional features for SMS can be found in Options > Add, these are:

- Add contact info,
- Add phiz,
- Templates.

When sending MMS messages, proceed in the same way as described above for SMS messages, but select MMS. The available features for MMS message are located in Options > Add, they are:

- Subject,
- Picture,
- Audio,
- Record,
- Video,
- Next page,
- Previous slide,
- vCard,
- Other files.

11.2 Reading and replying to SMS and MMS

Received messages are saved in your inbox. To read unread or already read messages, go to Menu > Message > Inbox. Unread messages are at the top of the list. To read an unread message, select the message and press OK key. To send a return message to sender, press OK key after reading the message.

After reading the message, press Options and select:

- Delete – deleting the current message,
- Write message – sending a message to the sender,
- Forward – sending a message to another recipient,
- Call – making a call to the sender,
- Move – changing where messages are stored,
- Add to contacts – saving the sender in the phone book,
- Details – read additional information about the message.

11.3 SMS boxes

11.3.1 *Inbox*

Stores received SMS and MMS messages, displaying them in order from the newest. In order to distinguish the type of messages and the place of their recording, the following iconography was used:

	Unread SMS message (Saved in phone memory)		Unread SMS message (Saved on SIM card)
	Read SMS message (Saved in phone memory)		Read SMS message (Saved on SIM card)
	Unread MMS message		Read MMS message

Icons may vary depending on software version.

Use the up / down navigation keys to navigate your inbox.

To view additional features, press „Options” while viewing your inbox:

- Reply – sending an SMS / MMS message to the sender,
- Delete – deleting the current message,
- Delete all – deleting all messages from your inbox,
- Call – making a call to the sender,
- Lock – blocks the possibility of deleting the message,
- Move – changing where messages are stored,
- Mark – ability to mark selected messages,
- Sort – changing message sorting categories,
- Export SMS – ability to export messages to another folder,
- Add sender to – ability to add a sender to the phone book,
- Delete repeated numbers – select and delete messages from one sender,
- Add to blacklist – ability to add a number to the blacklist, which will result in blocking calls and text messages for this phone number.

11.3.2 *Outbox*

Stores SMS and MMS messages that failed to send.

11.3.3 *Drafts*

Stores SMS and MMS messages that have not been sent. To save a message here, create a message and then press Options > Save as draft. The message saved in this way can be edited, deleted or sent to the recipient at a later date.

11.3.4 *Sentbox*

Stores SMS and MMS messages that have been sent to the recipient. To change the settings for saving sent messages, go to Menu > Message > Options > Settings >

1. SMS > Save sent messages,
2. MMS > Save sent MMS.

11.3.5 *Security inbox*

Security inbox allows to secure selected messages. To place a message from inbox or other mailbox here, select Options > Move > Security inbox > OK. Access to this box is password protected. The default password is: 0000. To change access password, select Options > Change password.

11.4 Deleting messages

To delete a selected message, select „Delete” in Options.

11.5 Message settings

In standby mode, select Menu > Message > Options > Settings.

11.5.1 *SMS*

Available options are:

- Message center – number saved on the SIM card, needed to send SMS messages correctly,
- SMS validity period – ability to set a time period for reading sent messages by the recipient,
- Status report – ability to enable / disable the message informing about the delivery of the message to the recipient (network service),
- Reply path – ability to enable / disable response path,
- Save sent messages – ability to enable / disable saving sent messages, or ask to save before sending the message,
- Preferred storage – ability to determine where messages are stored,
- Export SMS – ability to export messages to another folders,
- Auto signature – ability to enable / disable, the function that adds a signature under each message,
- Signatire – ability to edit the signature.

11.5.2 *MMS*

Available options are:

- Receive options – ability to set MMS downloads in the home network and when roaming,

- Send options – ability to set validity period, priority and delivery report,
- File storage – ability to determine where messages are stored,
- Play audio – enabling / disabling sound playback of MMS messages,
- Restore default – restoring default MMS settings,
- Save sent MMS – ability to enable / disable saving sent messages.

11.6 Voicemail

Voicemail is an operator's service that allows callers to leave voice recording for the recipient has not answered the incoming call. To connect to your voicemail, simply press and hold key 1. To change your voicemail number, go to Menu > Messages > Voicemail server. You may receive your voicemail number from your service provider. For more information, please contact your operator.

12 MULTIMEDIA

In standby mode enter Menu > Multimedia and then select one of the available functions described below. To increase the number of stored files, install a micro SD memory card. To access additional options and settings, press „Options”.

12.1 Audio player

The audio player allows you to play audio recording files saved in MP3, MIDI and AMR formats. To start / pause playback, press OK key. Switching between recording files is done using the left / right navigation keys. Adjusting the volume level or audio files being played is available by pressing the up / down navigation keys.

12.2 Image

Photo viewer allows you to play image files saved in png and jpg formats. To open an image, press the OK key. Browsing through next images is done using the up / down / left / right navigation keys.

12.3 Video

The video browser allows you to play video files saved in MP4, AVI and 3GP formats. To play / pause the video, press the OK key. Browse next video recording using the up / down navigation keys.

12.4 Recorder

To start / pause audio recording, press the OK key or Options > Recording started. To end and save the recording, press the right soft key „Stop”.

13 FM RADIO

To turn the radio on / off, press the OK key. Use the up / down navigation keys to increase / decrease the volume. To search for channels, press Options > Auto search and save. Once you have found the channels, you can select one of them by pressing Options > Channel list > select one channel > Options > Play. To enable radio playback in the background, press the red handset or Options > Background play. If a headset is connected to the phone, the radio can be played through the speaker, to do so press Options > Open speaker.

Attention! The quality of the received signal depends on where you are. The reception of radio stations is influenced by many external factors that may cause poor reception quality, but this is not a basic for a complaint about the product.

14 APPLICATION

In standby mode, enter Menu > Application and then select one of the available functions described below.

14.1 Bluetooth

Via Bluetooth you can connect other electronic devices, such as a mobile phone or a wireless headset. Bluetooth connectivity allows you to transmit and receive data wirelessly. To turn Bluetooth on / off, select Bluetooth and press the left soft key or the OK key. The options for Bluetooth are: Bluetooth visibility, paired devices, device name, storage and help.

14.2 Torch

Possibility to turn on / off the torch. In standby mode, press and hold 0 key to turn on / off the torch.

14.3 Alarm

You can set and activate up to 3 alarm clocks. To do this, use the up / down navigation keys to select one item, and then press OK key. When editing, you can change the alarm clock name, time, ringtone and repeat mode. After completing all the data, confirm activation of the alarm clock by pressing left function key „OK”. To enable / disable the selected alarm clock, press left function key. When the alarm clock starts, you can turn it off by pressing the left soft key „Off”, or enable the snooze function by pressing the right soft key „Delay” (the alarm will ring in 5 minutes after selecting this function).

Attention! Enabled alarm clocks will be triggered even when the phone is turned off, if battery status allows it.

14.4 Calendar

The calendar will remind you about important events or tasks after adding them. Moving between individual dates is done using the up / down / left / right navigation keys. Press the left soft key „Options“ to:

- Add new schedule – adding a task / reminder for a selected day,
- View schedules – displays a list of tasks for the selected day,
- All schedules – displays a list of all tasks,
- Clear today's schedules – deleting sentences for the selected day,
- Clear all – deleting all tasks,
- Go to date – ability to display the selected day,
- Weekly / Daily – switches view.

Attention! The added tasks in the calendar will be called even when the phone is turned off, if the battery status allows it.

14.5 Calculator

The calculator allows you to perform simple mathematical operations. Possible operations are: addition, subtraction, multiplication and division. Using the calculator:

1. Enter the number using the numbers 0÷9 on the numeric keypad,
2. Select one of the actions using the up / down / left / rightnavigation keys,
3. Enter the next number,
4. To perform an action, select and press OK key „=“.

To enter a comma (.), press the * key. To enter a negative number (-), press the # key.

When performing several actions at the same time, they must be done in the correct order (according to art.).

14.6 STK (SIM services)

The SIM card may offer additional services independent of the phone itself. The name and functions of this menu depend on the type of services available.

14.7 My favorite

This function allows you to browse folders and files stored in the phone's memory and the memory card, if one is installed.

14.8 World clock

This function allows you to check the current time in other parts of the world.

14.9 Unit conversion

This function allows you to change the unit of a given quantity to another.

15 SETTINGS

In standby mode, enter Menu > Settings, and then select one of the available functions described below:

15.1 Profiles

The phone contains 4 types of profiles and the ability to add new ones that are responsible for its behavior in various situations. Profiles can be activated and personalized according to your need. The available profiles are: Normal, Silent, Meeting, Outdoor. To activate the selected profile, press the OK key. To personalize the selected profile, press Options > Settings, then make changes to:

- Rename – changing the profile name,
- Ring settings – ability to set separate ringtones for incoming calls and text messages,
- Adjust volume – ability to adjust the volume level for individual functions,
- Ring type – ability to set separate ringtone types for incoming calls and SMS,
- Other alert rings – ability to change the key tone, battery low alert, power ringtone.

In standby mode, by pressing and holding the # key you can quickly activate the Normal, Silent and Meeting profiles.

15.2 Phone settings

15.2.1 Time & data

The time and date should be edited using the numeric keys 0÷9. You can change the time format displayed on your phone, the date display type and time update settings. If the phone does not receive data from the GSM network after turning the device back on, or automatic update is turned off, the time and date must be entered manually.

15.2.2 Language settings

When you turn on the phone for the first time, a list of available languages will appear on the display. The phone will select the appropriate language based on the installed SIM card. The user can also select a different language that will refer to the phone Menu and its functions. In another language was selected by mistake, to restore English, press the Left soft key > Up > Up > OK > Down > OK > Down >

OK > Left soft key, then select the appropriate language and confirm your selection by pressing OK.

15.2.3 *Shortcut settings*

In standby mode pressing up / down / left / right navigation keys and right function key activates the selected functions. To assign other functions, select the key and press Select. Then select one of the available functions and confirm your selection by pressing OK.

15.2.4 *Auto power on / off*

The function allows you to set the phone to turn on / off automatically, which can extend the battery life on a single charge. To enable / disable this function, select the appropriate box and then press left function key. To change time and repetition mode of action, press the OK key.

15.2.5 *Power management*

This function allows you to check the battery charge level expressed as a percentage.

15.2.6 *Restore factory settings*

This option restores the phone to factory settings. After selecting this option, enter the password and confirm by pressing OK. The default security password is: 0000.

15.3 Call settings

15.3.1 *Call divert*

This is a network service for incoming calls and its availability depends on your operator. It is possible to redirect incoming calls directly to voicemail or to a selected number. There are several cases when a call will be redirected:

- Call forwarding unconditional – absolute redirection of all incoming calls,
- Call forwarding on busy – redirection of an incoming call if another call is already in progress,
- Call forwarding on no reply – redirecting an incoming call if it is not answered,
- Divert if unreachable – redirecting an incoming call if the phone is out of network coverage,
- Cancel all diverts – canceling all enabled redirects.

To enable the selected redirection, press Select > On, then select whether the redirection should take place to voicemail or to a telephone number. After completing the data, confirm by pressing OK.

To disable the selected diversion, press Select > Off.

To check the status of the selected diversion, press Select > Check status.

15.3.2 *Call waiting*

This is a network service for incoming calls and its availability depends on your operator. If during a call there is an incoming call and the call waiting function has been enabled, you can put the current call on hold or hang up and answer the incoming call by selecting one of the options in the Menu by pressing the left soft key.

Enabling, disabling and checking the status of this function is the same as for call forwarding.

15.3.3 *Call barred*

This is a network service for incoming calls and its availability depends on your operator. This function allows you to block: all outgoing and incoming calls, incoming calls when roaming, international call and cancel all barring.

Enabling, disabling and checking the status of these functions is the same as for call forwarding.

15.3.4 *Caller ID*

This is a network service for outgoing calls and its availability depends on your operator. This function allows you to make a choice for presenting your number to the recipient of the call. The available options are: Hide ID, Display own ID and Display ID by network.

15.3.5 *Others*

Additional calling options included in the phone are:

- Call time minutes reminder,
- Auto redial,
- Vibration when connected,
- Reply SMS after reject,
- Flight mode,
- Auto record voice call.

15.4 *Connections*

In this section the settings can be customized:

- Network account – you can get the correct configuration from your operator; some operators allow you to configure your phone remotely,

- Data service – enable / disable GPRS connection, required for some network functions,
- Data roaming – ability to choose whether the data connection is to be established while roaming,
- Network selection – ability to select the network automatically or manually,
- Network type – ability to select your preferred connection with LTE/3G/2G network type,
- VoLTE calls – ability to enable / disable making calls via LTE.

Individual network settings may vary for individual operators and SIM cards. For more information, please contact your operator.

15.5 Display

In this part the settings can be customized:

- Animation effect,
- Wallpaper,
- Idle display,
- Contrast,
- Backlight,
- Keypad backlight,
- Auto keypad lock.

15.6 Security

15.6.1 PIN

The PIN code is the identification of your SIM card and is provided by your operator. When turning on the phone, you must enter the PIN code if the SIM card has such protection enabled. To enable / disable the PIN code, enter the PIN. You can change your PIN by selecting Modify PIN. Entering an incorrect PIN code 3 times in a row will block the SIM card. It can be unlocked using the PUK code. Entering the PUK code incorrectly 10 times will block the SIM card permanently. To obtain information about the PIN or PUK code, please contact the operator.

15.6.2 Modify PIN2

The PIN2 code of the SIM card also depends on the operator, so you must contact your operator to obtain it.

15.6.3 Phone locked

When turning on your phone, you will need to enter your password if this feature is enabled. The default password is: 0000.

15.6.4 *Modify the cellphone password*

Possibility to change the password for the phone lock.

15.6.5 *Privacy*

The privacy protection feature protects selected features of your phone. A security code is a password to lock the phone.

15.6.6 *Lock screen by end-key*

This function allows you to activate the keypad lock manually in standby mode. To unlock the phone, press the left function key and then *****.

15.6.7 *Fixed dialing number*

This is a network service for outgoing calls and its availability depends on your operator. To enable it, a PIN2 code is required. For more information, please contact your operator.

15.6.8 *Blacklist*

This function blocks calls and messages from numbers that have been added to blacklist. To add a phone number, select Blacklist > Options > New or Import contacts. In the blacklist settings you can enable / disable call and message blocking.

15.7 *Number sound*

This function allows you to speak numbers while dialing and during incoming calls. To enable / disable individual functions, simply select the appropriate option and press the left function key.

15.8 *Themes*

This function allows you to change the way all content is presented on your phone. There are two types of topics to choose from.

15.9 *Check update*

This function provides the ability to install software updates if they become available in the future.

16 INTERNET

In standby mode, select Menu > Internet. It is a universal web browser used to browse websites on a mobile device. The Internet function requires installing a SIM card in the phone and enabling data transmission. For this function to work properly, Menu > Settings > Connections > Network account must contain appropriate settings granted by the operator. To obtain more information in this regard, please contact the operator.

17 CONNECTION TO A COMPUTER

You can connect your phone to your computer using a USB cable, so you can copy and move files between your phone and computer. To connect your phone.

1. Insert the cable into the USB-C port on your phone,
2. Connect the other end of the cable to the USB port on your computer,
3. The phone screen will display the following messages: „Charging”, „Udisk” and „PC connecting”. Select storage devices.

18 FAQ (TROUBLESHOOTING)

Only qualified service workers are authorized to repair the phone. Any attempts of unauthorized repair and modifications void the warranty!

„Can not make a phone call”	Make sure the number you are dialing is correct. If you make an international phone call, dial a country code before the actual number (e.g. 0049 or + 49 for Germany). If you have a prepaid card, make sure there are sufficient funds available on the card to place a phone call.
„SIM card in place, emergency calls only (112)”	Make sure the SIM card is installed correctly.
„The phone does not work, the phone does not charge when plugged in”	If you have not used the phone for a long time, the battery might be „deeply-discharged”, to recover a deeply-discharged battery leave your charger plugged in, although there will be no image on the display.
„Can I make a phone call while abroad?”	If you are out of the country and ROAMING is enabled, your phone automatically will use the foreign telephone network. To learn more, contact your service provider.
„Can I make an emergency call if there is no reception or if there are no funds on my account?”	If you are in the area with no reception by any network, no phone calls can be made. If you have no funds available on the account, emergency call to 112 can be made.

„How to get the most of reception?”	If there is a message „Does not work” on the display, it means there is no signal or sufficient funds on the account. In such a case, only making emergency call 112 is possible as long as the User is in the area covered by another service provider. Reception might be weaker if you are inside buildings. Move towards windows org et outside.
„What is the Text Message Center?”	It is the service provider's center number storing all text messages. The number is stored on the SIM card, but you can change the number in the phone MENU and enter another number.
„When is the fee for making a phone calls charged?”	A fee for making a phone call is charged as soon as a phone call is made. To learn more about charging details, contact your service provider.
„Is there any way to make sure my message was delivered to the recipient?”	Enable Delivery Report option. As soon as the text message is delivered to the recipient, you will get a return message (network service).

19 TECHNICAL SPECIFICATIONS

19.1 Main functions:

Color display: 1.77" 160x128
Hands-free function
Phone book: 500 entries
Function of sending and receiving SMS and MMS
Speed dial numbers (3÷9)
Theme: High contrast
FM radio
Audio file played (MP3 / MIDI / AMR)
Video player (MP4 / AVI / 3GP)
Dictaphone
Calendar, calculator, flashlight, alarm clock
RAM + ROM: 48MB+128MB
MicroSD memory card reader: max. 32GB
Dual SIM: Nano SIM + Nano SIM
Battery capacity: 1000 mAh
Standby time: 100h*
Talk time: 10h*
Weight of the handset with battery: 77,3g
Dimensions: 121x46x14 mm

* depends on conditions and mobile network signal GSM

19.2 AC Adaptor

The phone charger for the phone is compliant with the EU Commission regulation 2019/1782

Model ID	Travel Charger DYK0051000
Input Voltage	AC 100-240V
Input AC Frequency	50/60Hz
Output Voltage	DC 5.0V
Output Current	0.5A
Output power	2.5W
Average Performance While Working	70.6%(230V) 73.47%(115V)
Performance with low Workload (10%)	-
Power consumption if idle	0.04W(230V) 0.06W(115V)

19.3 Operating Frequency Range and Max Conducted Power

System	Frequency Range	Maximum emitted power
GSM 900	Uplink 880MHz~915MHz; Downlink 925MHz~960MHz	33.27dBm
GSM 1800	Uplink 1710MHz~1785MHz; Downlink 1805MHz~1880MHz	30.33dBm
WCDMA Band I	Uplink 1920MHz~1980MHz; Downlink 2110MHz~2170MHz	21.22dBm
WCDMA Band VIII	Uplink 880MHz~915MHz; Downlink 925MHz~960MHz	23.03dBm
LTE Band 1	Uplink 1920MHz~1980MHz; Downlink 2110MHz~2170MHz	22.72dBm
LTE Band 3	Uplink 1710MHz~1785MHz; Downlink 1805MHz~1880MHz	21.56dBm
LTE Band 7	Uplink 2500MHz~2570MHz; Downlink 2620MHz~2690MHz	24.17dBm
LTE Band 8	Uplink 880MHz~915MHz; Downlink 925MHz~960MHz	23.90dBm
LTE Band 20	Uplink 832MHz~862MHz; Downlink 791MHz~821MHz	24.00dBm
LTE Band 38	Uplink 2570MHz~2620MHz; Downlink	24.14dBm
BT short range communication (EDR)	2402MHz~2480MHz	6.37dBm
FM radio	87.5MHz~108MHz	-

19.4 SAR information

Information about the impact of radio waves and Specific Absorption Rate [SAR]. This phone model has been designed to meet all international standards pertaining to the impact of radio waves as recommended by international guidelines. These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an independent scientific organization with a safety margin to protect all people regardless their age and health condition. Such guidelines use a unit of measurement called Specific Absorption Rate (SAR) – actual absorption. As recommended by ICNIRP, the border value of SAR for portable equipment is 2.0 watts per kilogram (W/kg), and it is an average value per 10kg of tissue. SAR value is determined at the maximum transmit power and in the full spectrum of frequencies covered by research; the actual SAR value while the product is working might be much lower than the maximum level. Such discrepancies result from automatic changes in device power necessary to ensure that the device operates at a minimum power level required to be connected with network.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Highest measured SAR value in tests	Limit
SAR rate – device on the head	1.152 W/kg 10g
SAR rate – device at the torso (distance 5mm)	1.553 W/kg 10g
SAR rate – device at the limb (distance 0mm)	3.116 W/kg 10g

20 BATTERY INFORMATION

There is a battery in the phone that is supposed to provide emergency power in case of power blackout. This battery is charged with the AC Adapter, included in the set.

The telephone life powered by the battery depends exclusively on conditions under which the phone is used. Your distance from a relay transmitter, number and the length of phone calls significantly reduce its life.

After multiple charges and discharges, it is natural for the battery to eventually lose its ability to hold charge. Get a new battery as soon as you notice a significant drop in the battery performance.

Use only batteries recommended by the Manufacturer.

Never keep the phone in places with too high temperature; doing so might negatively impact the battery and the phone.

Never use the battery that is clearly damaged; doing so might damage the phone. The battery must be positioned according to its polarization.

Leaving the battery in places with too high or too low temperature will reduce its life. The battery should be kept in the temperature between 15°C and 25°C.

21 PROTECT YOUR ENVIRONMENT



Old batteries pose environmental risks. They should be disposed of at a special place in a special container in compliance with current regulations. Never throw old batteries or chargers to municipal solid waste, they should be collected for disposal.

NEVER PUT BATTERIES AND CHARGERS INTO FIRE!

Important! The phone is marked in compliance with the European Waste Electrical and Electronic Equipment Directive of 2012/19/UE (WEEE) and the Polish Act on Waste Electrical and Electronic Equipment, and with the symbol of waste electricals.

Such a symbol tells us that the device, after use, must not be disposed of in the normal household waste stream.

Important! Never throw the phone nor accessories to municipal solid waste!!! The product should be utilized in authorized places only.

As the product contains hazardous components, improper storage and use of such equipment might lead to serious consequences harmful for both people and natural environment.

To facilitate recycling of materials used to produce the phone package, follow the local rules pertaining to material sorting for this kind of waste.

22 SIMPLIFIED EU DECLARATION OF CONFORMITY

Maxcom S.A. hereby declares that the radio equipment type MAXCOM MM718 mobile phone is compatible with:

Directive 2011/65/UE of 8 June 2011 (RoHS restriction of the use of certain hazardous substances in electrical and electronic equipment);

Directive 2014/53/UE RED of 16 April 2014 (Radio Equipment Directive).

The full text of the EU Declaration of Conformity is available at the following internet address: <http://www.maxcom.pl/deklaracje>

23 UK DECLARATION OF CONFORMITY

Hereby, Maxcom S.A. declares that the radio equipment type Desktop Mobile phone MAXCOM MM443 is in compliance with the relevant UK legislation.

The full text of the UK declaration of conformity is available at the following internet address: www.maxcom.pl/deklaracje

This Manual is provided for information purposes only. Some functions and options might vary depending on software and the country.

The Manufacturer shall not be liable for any consequences arisen from misuse, abuse or any other use of the phone in violation of this User Manual.

Important! The Manufacturer reserves their right to modify a product and its features without prior notifications. Any trademark mentioned or used in this material remain the sole property of their owners.

MAXCOM S.A.
43-100 Tychy,
ul Towarowa 23a
POLAND
tel. 32 327 70 89
fax 32 327 78 60

www.maxcom.pl
office@maxcom.pl

