

maxcom

User Manual



Mobile phone **GSM/ WCDMA/LTE**
Maxcom **MM918 STRONG**
DualSIM

If technical assistance is required, we recommend contacting the helpline:

(+48) 32 325 07 00 lub.serwis@maxcom.pl

Our website:

<http://www.maxcom.pl/>

Keep the proof of purchase as it is integral to the guarantee.

Note: The phone works in GSM network: 900/1800, WCDMA :900/2100MHz, LTE band:1/3/7/8/20/38.

Insert correctly SIM card prior to switching on your phone.

Contents:

1. The Set Contents:	7
1.1 Key features:	8
2. Technical data	7
2.1 Frequency ranges and maximum power equipment	9
2.2 Charger	10
3. Safety Guidelines	11
4. Installation of components	12
4.1 SIM card and battery installation	13
4.2 Charging the battery	16
5. Phone description	18
6. Use the phone	22
6.1 Switching On the Phone	22
6.2 Switching Off the Phone	22
6.3 Standby Mode	22
7. MENU operation	24
8. Keylock	25
8.1 Automatic keylock	25
9. Entering the text	25
10. Phonebook	26
10.1 Saving contacts	26
10.2 Viewing Phonebook	26
10.3 Deleting contacts	27
10.3.1 Deleting a single contact	27
10.3.2 Deleting a multiple Contact	27
10.3.3 Deleting All Contact	27
10.4 Copying and moving contacts	28
10.5 Sending a business card	28
10.6 Speed dial	28
10.7 Memory status	29
11. Answering Phone Calls	29
11.1 Direct dialling	29
11.2 Dialling a number from your Phonebook:	29
11.1 Dialling a number from Call Log	30
11.2 Simple dialling	30
12. Answering Phone Calls	30
13. Options while talking	30
14. Call log	31

15. Text (SMS) & Multi-Media (MMS) Messages	32
15.1 Creating and sending SMS.....	33
15.2 Reading and responding	34
15.3 Message boxes	35
15.3.1 Inbox	35
15.3.2 Outbox.....	36
15.3.3 Drafts.....	36
15.3.4 Items sent	36
15.4 Deleting messages	37
15.5 Message settings	37
15.5.1 SMS.....	37
15.5.2 MMS	37
15.6 Voicemail.....	38
16. Multimedia	38
16.1 Picture browser	38
16.2 Camera.....	39
16.3 Video recording	39
16.4 Video player	40
16.5 FM radio	40
16.6 Voice Recorder	42
17. Audio player.....	42
18. Torch.....	42
19. Tools	42
19.1 Calculator	43
19.2 Alarm clock.....	43
19.3 Bluetooth	44
19.4 SIM services.....	44
20. File manager	44
21. Calendar	44
22. Internet.....	45
23. Profiles	45
24. Settings:.....	46
24.1 Phone settings	46
24.1.1 Date and time settings	46
24.1.2 Language	47
24.1.3 Language	47
24.1.4 Shortcut settings	47
24.1.5 Automatic switching off of the phone	47

24.1.6	Choosing web browser	48
24.1.7	Restore factory setting.....	48
24.2	Call settings.....	48
24.2.1	Dual SIM	48
24.2.2	Aeroplane mode	48
24.2.3	Call forwarding	48
24.2.4	Waiting call.....	49
24.2.5	Call blocking.....	50
24.2.6	Hiding the number	50
24.2.7	Other Settings	50
24.3	Display settings	51
24.4	Font size settings	51
24.5	Security settings.....	51
24.5.1	PIN Code.....	51
24.5.2	Change PIN2	52
24.5.3	Phone lock	52
24.5.4	Change phone password	52
24.5.5	Lock with red receiver.....	52
24.5.6	Fixed dialling number	52
24.5.7	Blacklist	52
24.6	Network settings	52
25.	FAQ (troubleshooting)	53
26.	Conditions of use and safety	55
27.	Terms of Warranty	57
28.	Information concerning the battery	57
29.	Protect Your Environment.....	59
30.	SAR Information	59
31.	SIMPLIFIED EU DECLARATION OF CONFORMITY	62

1. The Set Contents:

GSM Telephone

USB cable

Batteries


Headset

Screwdriver


User Manual

Warranty card

Charger *(see marking on the packaging)

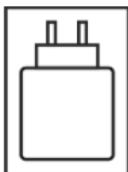

* Package includes a charger.

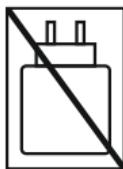

*For environmental reasons this package does not include a charger. This device can be powered with most USB power adapters and a cable with USB Type-C plug.

It is advisable to keep the packaging, it may be useful for possible transport

2. Technical data

Network

GSM 850/900/1800/1900 ;
WCDMA:900/2100;
LTE: B1/B3/B7/B8/B20/B38

Memory RAM + ROM

48MB+128MB

MicroSD card support	up to 32GB
Karta SIM (Dual)	Nano SIM+ Nano SIM
Display	2.4" TFT,QVGA 240x320px
Camera	2Mpix
Bluetooth	5.0
Batteries	2500 mAh
Standby time:	Up to approx. 360h*
Call time:	up to approx. 24 h*
Weight	113 g
size:	130.8x58.9x19.9mm

*depending on conditions and signal strength of the mobile network signal

2.1 Key features:

2.4" colour display

IP 68 - resistant to water, dust and mud

MicroSD memory card slot

Speaker phone

Phonebook - 500 entries

Sending and receiving SMS and MMS messages

function

Internet

Speed dial - 8 numbers

Call time display

2MPix camera

Loud ringtone
FM radio
Calendar
Calculator
Alarm clock
Torch
2500 mAh battery

2.2 Frequency ranges and maximum power equipment

System	Frequency range	Maximum emitted power
EGSM 900	880MHz 915MHz	33.15dBm
DCS 1800	1710MHz 1785MHz	29.15dBm
WCDMA Band I	1920MHz 1980MHz	22.28dBm
WCDMA Band VIII	880MHz 915MHz	22.45dBm
LTE Band 1	1920MHz 1980MHz	22.65dBm
LTE Band 3	1710MHz 1785MHz	22.15dBm
LTE Band 7	2500MHz 2570MHz	22.29dBm
LTE Band 8	880MHz 915MHz	21.61dBm
LTE Band 20	832MHz 862MHz	21.97dBm
LTE Band 38	2570MHz 2620MHz	22.22dBm
Bluetooth BR/EDR	2402MHz 2480MHz	-4.31dBm EIRP
FM radio	87.5MHz -108MHz	-

2.3 Charger



Power delivered by charger must be between a minimum of 0,75W required by radio device and a maximum of 10W to achieve maximum charging speed.

* The external power supply for the phone (Included optionally) complies with Commission Regulation (EU) 2019/1782

The external power supply for the phone complies with Commission Regulation (EU) 2019/1782

Model identifier	Power adapter LM-UV050100SM
Input voltage	AC 100-240V
AC input frequency	50/60Hz
Output voltage	DC 5.0V
Output current	1.0 A
Output Power Capacity:	5 W
Average efficiency during operation	74.68%(230V) 75.74%(115V)
Efficiency at low load (10 %)	-
Power consumption in no-load condition	0,090W(230V) 0,060W(115V)

3. Safety Guidelines

Reading these guidelines presented below will minimize the risk of misusing the phone.

- Do not use the phone in areas where it is prohibited, e.g. petrol stations or hospitals. Using the phone in such places can expose others to danger. Do not switch the phone on if it may cause interference with other devices!
- You mustn't use your phone without hands-free accessories while driving.
- You mustn't use your phone in hospitals, airplanes, refueling points or in proximity to flammable materials.
- The telephone emits electromagnetic field that might negatively interfere with other electronic devices including medical equipment. A safe distance between a telephone and implanted medical devices such as a heart pacemaker should be maintained as recommended by manufacturers of medical equipment. Users with implanted devices should read and follow the instructions by manufacturers of implanted medical devices. Users with a heart pacemaker should not carry a telephone in their front chest pockets and they should hold the telephone next to the ear opposite to the medical device in order to minimize the risk of interference;
- The device and its accessories might contain small parts. Keep the phone and its components out of the reach of children.

- Never repair or try to modify your phone by your own. Any faults should be repaired by a qualified service.
- Use only original batteries and chargers. Use of any unauthorized accessories could damage your phone or might cause an explosion.
- WATER AND DUST PROTECTION - the phone is IP68-rated, i.e., resistant to dust ingress and continuous immersion to a maximum depth of 1.5 metres. If the phone is immersed deeper, it may be damaged! The phone can be used in the rain.

For IP68 protection to be maintained, care must be taken to ensure that all rubber seals are correctly installed and undamaged (no gaps of any kind). The loudspeaker diaphragm must not be damaged (e.g. punctured with a sharp instrument) and must be free of any kind of impurities (e.g. metal filings). The case should not have any mechanical damage (e.g. cracks) on it. In the event that the device is found to be improperly operated, all claims for water and dust protection will be rejected.

4. Installation of components

Insert SIM card prior to switching on your phone. Careful attention must be paid not to damage the card and SIM slots during insertion. SIM cards should be kept away from children.


4.1 SIM card and battery installation

Make sure the phone is switched off before inserting the SIM card. The charger should be disconnected. To insert the SIM card, first remove the battery (if inserted) as shown and described.

- When your phone is switched off, turn the phone face down, then use a screwdriver to unscrew the 2 screws and gently pull off the battery cover by levering it upwards.




- Remove the battery while lifting it up with your fingernail.
- Insert the SIM Card into the „SIM1 SLOT” with the metal contact pins facing downwards.
- Insert the SIM card into the socket with the metal contacts facing downwards and the notch as shown in the picture.
- Close the pin by moving it to the right side.
- As an option, install the SIM2 Card to „SIM2 SLOT”.
- Slide the SIM2 card slot pin to the right and lift it up
- Insert the SIM card into the socket with the metal contacts to the underside and close the pin.

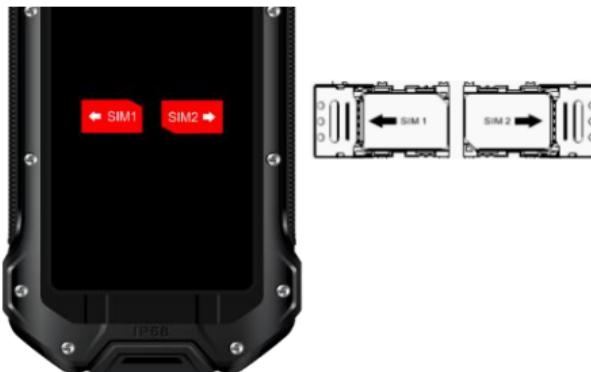

- As an option, install a MicroSD Memory Card.

To do it, slide the pin to the *LEFT*, and next lift the pin. Insert MicroSD Card so its contact pins touch the telephone contacts, and slide the pin to the *RIGHT*.

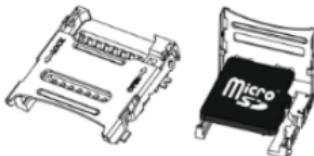

Be careful while using the memory card particularly while installing and uninstalling the card. Some memory cards shall be formatted on the computer prior to an initial use. Make backup copies of data stored on the cards used in other devices, if you use SD cards! Misuse or other factors might cause damage or loss of data stored on the cards.

- Insert the battery with the contact pins +/- facing downwards

- After inserting the battery, place the battery cover on the phone and tighten the 2 screws slightly.



4.2 Charging the battery

Note! Use only the original battery included in the set. Using unauthorized batteries could damage your phone and will void the Manufacturer's warranty.

Do not connect the charger when the back cover is not in place.

To charge the phone:

1. Plug one end of the charger into a power outlet.
2. Plug the other end of the charger into a jack at the bottom of your phone. A message about charging will appear on the display screen. During charging, battery indicator bars will blink.

3. When the battery is fully charged (battery indicator bars will stop blinking), unplug the charger from the power outlet and from the phone.



Note:

- Make sure the battery is correctly installed before starting the charging process.
- Never remove the battery while charging - doing so could damage the phone.
- If the battery voltage is too low for your phone to work, a message will appear about expected powering off and next your phone will automatically switch off.
- If the battery is totally discharged (e.g. Due to keeping on a radio or torch) and you plug in the charger, you should wait several minutes before a charging icon appears.

5. Phone description





1	Speaker.	10	Red receiver key
2	Display	11	# Key
3	OK Key	12	Key *
4	Navigation key (up/down/left/right)	13	Camera
5	Left function key (LFK)	14	Keyboard flash
6	Green receiver	15	Screw the battery cover
7	Numeric keypad	16	Phone loop
8	Torch	17	Ringtone volume
9	Right function key (RFK)	18	Sockets for charging, headphones (under the seal)

Basic keys functions

Key	Function
Red reciver	Short press: return to standby; end call. Long press: switch off/on the phone
Green Receiver	Short press: call connection; in stand-by mode access to call log
Up	Shortcut to Audio
Down	Shortcut to DUAL SIM settings
Left	Shortcut to Write a message
Right	Shortcut to Profile
LFK	Function as described on the display
RFK	Function as described on the display
1	Short press: digit 1 Hold: voice mail
0	Short press: digit 0 Hold: switch the torch on/off
2-9	Short press: digit 2 to 9 Hold: dials the programmed speed dial number
*	Character input: *, +. When texting: special characters
#	Short press: Changing the input mode while texting; entering the # sign Hold: On/off silent mode
OK key.	Confirm, select, edit button, often LFK-compatible function
LFK plus*	Locking/unlocking the keypad

6. Use the phone

6.1 Switching On the Phone

Press and hold the red receiver key to switch on your phone. The battery cover must be properly closed and tightened.

If a message asking for the PIN code appears, you must enter your PIN. You can find it in the SIM card starter set.

Upon entering the code, press the green receiver key to confirm.

Warning: If you enter an incorrect PIN three times in a row your SIM Card will be locked.


It can be unlocked using the Personal Unblocking Key [PUK] . Entering the PUK code incorrectly 10 times will lock the SIM card permanently.

6.2 Switching Off the Phone

To switch off the phone, press and hold the red receiver key.

6.3 Standby Mode

If the phone is switched on, but there are no activities, the phone will go into **Standby mode**.

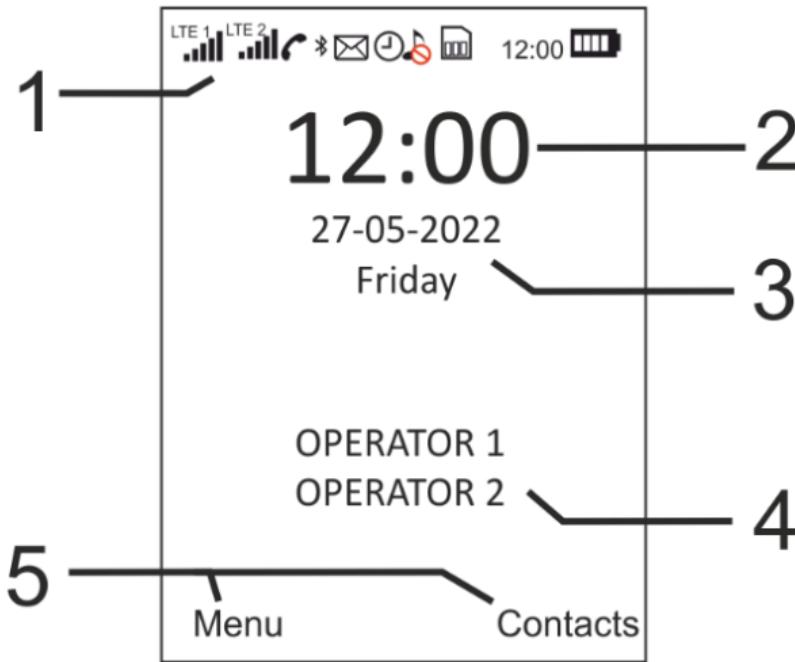

1. Icons to show functions:

	Network signal		No SIM card/SIM card error
	No services		No signal/
	VoLTE service active		LTE coverage
	3G/2G coverage		Aeroplane mode
	New text message MMS		Missed Phone Call

	Vibration only (meeting profile)		Silent Mode on
	Active profile "Outside"		Roaming active
	Alarm Clock Activated		Call forwarding enabled
	SD card inserted		Bluetooth enabled
	Headphones connected		Battery close to empty
	Battery fully charged		Battery discharged
Icons might vary depending on the software version available		* The icon also appears in domestic roaming if the subscriber uses a network of another service provider	

2. Hour
3. Date
4. Name of the SIM1 SIM2 card operator(s)
5. Description of the function keys

7. MENU operation

To enter the **MENU** , press the **OK** key or **the left function key** while being on Standby mode.

To navigate in MENU use the keys
UP/DOWN/RIGHT/LEFT.

To confirm the selected option press the green receiver key.

8. Keylock

To lock/unlock the keypad press MENU (LFK) and then *

It is not necessary to unlock the keys to answer the call.

NOTE: The keypad can be manually locked when the display is in Standby mode.

8.1 Automatic keylock

To set the automatic keypad lock, select:

MENU>Settings>Display>Auto keylock

Set the time after which the keypad locks automatically.

9. Entering the text

To write text, press the corresponding key until the desired letter is displayed.

Spacebar - press the 0 key.

Full stop, comma and other characters-press the 1 key several times.

To enter a symbol or special character, press *.

To enter a digit, press and hold the number key.

To be able to change the text entry method press the "#" key

Pl - letters with Polish characters, after the full stop a capital letter

pl - lower case letters with Polish characters

PL - capital letters with Polish characters

Abc - letters without Polish characters, after the full stop a capital letter.

abc - lower case letters without Polish characters

ABC - capital letters without Polish characters

123 - digits

10. Phonebook

10.1 Saving contacts

You can save a new contact in one of several ways:

1. In standby mode, select the desired number > press OK > select memory (Phone or SIM) >OK> press the centre OK key to edit the field> press LFK (Save) to save the contact
2. In a similar way, you can save a number from the list of missed and received calls. In order to do this, press the green receiver key in Standby mode and proceed as above.
3. You can add a new Contact directly to your Phonebook. To do this, select Contacts> New Contact. Select where you want to save the contact. and enter the name and number of the contact. Press "Save" (LFK)

If you have chosen to save a contact on your phone, you can add a photo and assign a ringtone to the contact.

10.2 Viewing Phonebook

1. Enter MENU and select Contacts or, in Standby mode, press RFK (Phonebook)
2. Type the first character of the Contact you are looking for.

3. The phone will go to the names starting with this character. Use UP/DOWN keys to scroll up and down in the list of Contacts.

10.3 Deleting contacts

10.3.1 Deleting a single contact

If you want to delete a Contact from the phone or the SIM card, do as follows:

1. Select Phonebook
2. Select the contact you want to delete, press Options>Delete
3. Press OK to confirm.

10.3.2 Deleting a multiple Contact

If you want to delete several contacts from your phone or SIM card, do as follows:

1. Select: Phonebook>Options>Remove Multiple
2. Select the desired contact, using the OK key select/unselect the contacts
3. Then select Options>OK>OK.

10.3.3 Deleting All Contact

If you want to delete all contacts from your phone or do as follows:

1. Select: Contacts>Options>Delete Multiple>Options >Delete All>Options>OK
2. Confirm by pressing OK.

10.4 Copying and moving contacts

To copy/transfer contacts from the SIM card (SIM1 or SIM2) to the phone, or from the phone to SIM1 or SIM2, do as follows:

1. Select: MENU-> Phonebook-> Options-> Import/Export-> Copy, then select from where you want to copy the contacts (from phone, SIM1 or SIM2) and to where (to phone, to SIM1, to SIM2). Select the contacts to be copied and then press Options-> OK.
2. Analogous to copying, the process of transferring contacts can be carried out: MENU-> Phonebook-> Options-> Import/Export. Then choose whether you want to Import contacts or export

10.5 Sending a business card

To do this, do as follows: MENU-> Phonebook-> select contact-> Options-> Send vCard-> select the form in which the business card is sent: SMS, MMS or Bluetooth. Business cards are sent as a file: vCard (.vcf)

10.6 Speed dial

Numbers can be assigned to keys 2-9, in which case a call will be made to the stored number when the corresponding key is held down in standby mode.

In the MENU, select:

- Phonebook>Options>Other>Fast Dial>OK
- Select which key you want to assign the

- number to
- Press OK
- Enter a number or select a number from the contact list by pressing LFK>OK
- Press OK again to save.

10.7 Memory status

This option allows you to check the memory status of SIM1, SIM2 and the phone.

In MENU select

>Phonebook>Options>Other>Memory status

11. Answering Phone Calls

11.1 Direct dialling

1. Enter the phone number you wish to call.

Note:

For international calls, it is required to enter "00" (or "+") and the country code before dialling the actual number. To enter "+" press the key twice.

„*”

2. Press the "green receiver" to call the selected number.
3. To end the call, press the "red receiver".

11.2 Dialling a number from your Phonebook:

In standby, press RFK to access the phone book. Use the UP/DOWN keys to select the correct contact, press the green receiver.

If you want to quickly navigate to a contact starting with, for example, the letter U, press the 8 key twice, using the UP/DOWN keys, highlight the desired contact and press the green receiver.

11.1 Dialling a number from Call Log

When the phone is on standby mode, press the green receiver to access the list of recent calls. Use the UP/DOWN keys to navigate through the call list. Press the green receiver to call the number.

11.2 Simple dialling

If you have previously assigned contacts to keys 2-9,

(see: 10.6) in standby, press and hold the corresponding key (2 to 9) to make a call.

12. Answering Phone Calls

To answer an incoming call, press the green receiver.

To reject an incoming call, press the red receiver.

To mute an incoming call, press the OK key

13. Options while talking

While a call is in progress, press:

- RFK (Handsfree) to switch to handsfree/phone mode
- Up/Down key to increase or decrease call volume
- Press Options to enable additional functions:

- Connect to headset: can be switched to talk via Bluetooth headset
- Add new connection: allows another connection to be established
- Hold: suspends the connection
- Start recording: starts the recording of the call
- Microphone off/on
- Volume: allows you to increase or decrease the call volume.
- Phonebook: allows you to enter the Phonebook e.g to verify the phone number
- Call log: allows you to check the call log
- Messages: allows you to check received/saved messages

14. Call log

To access the call log, enter the main MENU and select Call log, then select:

Missed (to view missed calls)....

Dialled (to display dialled numbers).

Received calls (to view received calls)

Rejected calls (to view calls that have been automatically rejected due to the number being blacklisted)

Remove all (to remove all connections from the register)

Call time - an option showing the times of individual calls,

Data service counter - shows the amount of **data** sent and received, per SIM card

Note: To view the call log, simply press the green receiver while being on standby mode. Coloured symbols indicate the type of connection



Dialled numbers (green)



Received calls (blue)



Missed calls (red)



Rejected calls (grey)

To display additional options, select LFK:

- **Details**, displays call details
- **Call**, calls the number
- **Write a message**, allows you to send an SMS or MMS
- **Add to contact**, allows you to save a number in your Phonebook)
- **Add to blacklist**, allows you to block unwanted calls and texts
- **Delete**, deletes the item
- **Delete all**, removes all items from the register in question

Once you have selected the correct call, press the OK key to see how many times the number has called

15. Text (SMS) & Multi-Media (MMS) Messages

The telephone allows you to send and receive text and multimedia messages. When the  icon is displayed on the screen, it means that there is at least one unread message.

To enter the **SMS MENU**, select

Menu>Messages>Inbox in standby mode. When the inbox is full, a message will appear that the message memory is full. Delete messages from the inbox to resolve the problem.

15.1 Creating and sending SMS

1. Enter a phone number or press RFK to enter the phone book to search for the contact you want to send a message to
2. Press Options > Create Message
3. Type your text message.
4. Press the OK key

or:

1. Press the LEFT key to enter Messages
2. Add a contact from the phone book or enter the number
3. Press the DOWN key to go to message entry, type your message.
4. Press the OK key

If you want to send a message to several people, add the next number after the semicolon when entering the number or add the numbers stored in the Phonebook.

To save the message, press Options>Save as draft (the message will be saved in Draft. draft(the message will be saved in the Drafts folder).

Press Options>Add to insert information about a contact stored in the Phonebook, - add an emoticon, insert a template, add a photo, subject, audio file, etc.

If you add a subject, picture, audio file, video, slide, the SMS message will be converted automatically into an MMS

15.2 Reading and responding

When the unread message icon appears on the display or you want to read received messages, select in MENU:

Messages>Inbox>Search for desired message

Press the OK key to read the message

When reading, you can use additional options

- Delete(deletes the message)
- Write a message (allows you to reply via SMS/MMS)
- Forward (allows a message to be forwarded to another recipient)
- Call (call the sender)
- Move (moves message to SIM/phone memory)
- Add to contact (allows you to save a number in your Phonebook)
- Details (date, time of message, storage memory)

15.3 Message boxes

15.3.1 *Inbox*

It lists received messages, sorted by receipt date.

	Unread message (stored in phone)		Unread message (saved on SIM1 or SIM2)
	Read message (stored in phone)		Unread message (saved on SIM1 or SIM2)
	Unread MMS message (pink)		Read MMS message (pink)

Icons might vary depending on the software version available

Use the **UP** and **DOWN** keys to navigate around in the inbox.

To display additional functions, press "Options" when viewing the inbox:

- Reply: write a text/ multi-media message to the sender
- Delete: deletes the message
- Delete all: deletes all messages from the inbox
- Call (call the sender)

- Lock (protects the message from deletion). To block, the message must be stored in the phone's memory
- Move (to move to SIM card memory or to phone memory)
- Select (e.g. to delete more messages)
- Sort (sorts by date, contacts, MMS topics, MMS/SMS types)
- Add sender to contact (allows you to save a number in your Phonebook)
- Delete the same number(deletes all messages from a given sender)
- Add to blacklist (blocks calls, SMS and MMS from this number)

15.3.2 Outbox

If you failed to send a message, it will be saved in Outbox.

15.3.3 Drafts

You can save unsent messages in the "Drafts" folder. In order

to do this, write your message and select Options> Save as a draft.

Go to Drafts to send, delete or edit saved messages.

15.3.4 Items sent

If you use the option Save sent messages are then saved in the "Sent" folder.

Use the **UP** and **DOWN** keys to navigate around in the inbox.

15.4 Deleting messages

To delete a selected message, enter options and select "Delete".

15.5 Message settings

Go to MENU to: Messages> >Settings, then use the Left/Right keys to select settings.

15.5.1 SMS

- SIM
 - **Message Centre: Number** read from the SIM card
 - **Validity period**: Allows you to set the SMS validity period
 - **Report of delivery** You may set to receive the return SMS that your SMS was delivered to the recipient (network service)
 - **Response path**: allows you to enable/disable the response path

-Save sent messages

Allows to activate/deactivate the function of saving sent messages

- Preferred memory

Allows to select whether the messages are going to be saved in the phone or on SIM card

15.5.2 MMS

- **Receiving options**: allows you to set up MMS downloads in your home network and while roaming

- **Sending options:** allows you to set the validity period of delivery reports, anonymous sending.
- **Memory settings:** allows you to choose where your messages are stored
- **Play a sound:** enables/disables playing sounds
- **Restore default - restores** MMS settings by default

15.6 Voicemail

The voice mail is the operator's service making it possible to leave voice messages when someone could not make a call with you. To get more information, contact your operator. If you want to change the number of your voice mail box select in the MENU: Messages>Voice mail

The number of the voice mail may be obtained from the service provider. To call the voice mail in the standby mode press and hold **1_{oo}**

16. Multimedia

16.1 Picture browser

In the MENU, select: Multimedia>Image (Pictures)
You can see the pictures taken earlier.

To store more images install a Micro SD memory card.

When using the **Photo** function, select the desired photo using the Up/Down/Left/Right keys.
Press OK to open the picture

Press LFK to display additional options

The phone supports the following file formats: png, jpg, gif

16.2 Camera

The phone has the ability to take photos and record video.

To activate the camera, select in MENU:

Multimedia>Camera.

When you turn you'll see an image on the screen.

The camera is equipped with digital zoom (magnification). To zoom in on the subject, press Up, to zoom out press Down.

To resize the photo, press 3.

To switch to photo/video, press 2.

To change options press LFK, >More options with the left/right keys you can select additional options, change them with the up/down key and confirm your selection with the OK key

To take a picture, press OK key and then LFK (Save) to save a picture.

16.3 Video recording

To switch on the video recorder, select MENU: Multimedia>Camera. To start recording, press LFK. To start recording, press the OK key.

To pause recording, also use the OK key. To stop recording, press LFK.

To select other options use navigation keys
Left/Right/Up/Down

In order to use video camera, installation of MicroSD Card is recommended (it is not included in the set); you also must select to save files on the memory card
Options >Settings> Preferred memory > Memory card

You can transfer photos and videos taken with your phone to your computer.

16.4 Video player

Select in the MENU: Multimedia> Video. Using the video player, you can view previously shot videos.

Select the correct recording using the Left/Right keys. To start and pause, press the OK key.

To rotate the image, press 2

More options can be found under the LFK key and the # key

The phone supports AVI, MP4 and 3GP format files

16.5 FM radio

The phone can be used as a radio player FM. It is possible to enjoy it once you have connected a headset, which doubles as an antenna.

NOTE: The quality of reception depends on where you are. Radio station reception is affected by a number of external factors that can cause poor reception quality, but this is not grounds for a complaint about the goods.

To switch on the radio, select MENU Multimedia>FM Radio. To switch the radio on/off, press the OK key.

- To search for channels press Options>Automatic Search
- To select a channel, select Options>Channel list>OK

Key functions while listening to the radio:

- The OK key: switch radio on/off
- Right: Next channel
- Left: previous channel
- Up: louder
- Down: quieter
- Red receiver: return to main menu (radio plays in background)
- RFK (Return)- return to previous MENU (radio off)
- LFK (Options)- Radio settings

To enable radio playback from a loudspeaker (with a headset connected), select the external loudspeaker in the FM Radio settings.

16.6 Voice Recorder

Music or ambient sounds can be recorded.

- Select in the MENU: Multimedia>Dictaphone
- To start or pause recording, press the OK key.
- To stop recording, select the right function key.
- Select **Options** to make the appropriate settings for the voice recorder.

17. Audio player

Select MENU > audio

Using the audio player, you can play back recorded sound files. To start or pause, press the OK key.

You can move between the previous and next recording using the Left and Right keys.

Press LFK to display additional options

You can adjust the volume using the Up/Down keys. The phone supports the following file formats: MP3, WAV, AMR

18. Torch

The torch can be switched on/off by pressing and holding the 0 key in standby mode or via Menu>Torch>OK

19. Tools

Select: MENU>>Tools

19.1 Calculator

To activate the calculator, in MENU select: Tools >Calculator. The following mathematical operations are possible: addition, subtraction, multiplication and division.

Enter the first number using the 0-9 keys, then use UP/DOWN to select the action and enter the second number and press Ok again.

19.2 Alarm clock

Select: Tools >Alarm clock

You can set three independent alarms on your phone.

Select the desired alarm and press the central OK button to enter the edit

To set the alarm time, use the numeric keys, You can change the alarm ringtone and repeat function

- The OK button allows you to enter the alarm clock edition
- To change the time use the numerical keys

To activate/deactivate an alarm press LFK (ON/OFF) on the corresponding alarm

If the alarm goes off, press LFK to switch off the alarm clock. Press RFK to activate the snooze function, the alarm will sound again in 5 minutes. If the phone is switched off, the alarm function will continue to work if the battery status allows it

19.3 Bluetooth

Bluetooth connectivity gives you the opportunity to send and receive files. You can also connect other devices such as wireless headset.

Select in the MENU: Tools> Bluetooth

In the Bluetooth Menu you can turn Bluetooth on, change visibility, see paired devices, change the name of your device, preferred storage for file transfers

19.4 SIM services

Regardless of the function of the phone itself, the SIM card can offer additional services. The name and functions of this menu depend on the type of services available.

20. File manager

Select under MENU>List of files

Use the Up/Down keys to select phone/memory card memory

Press LFK to display additional options

21. Calendar

Select MENU >Calendar

A calendar can remind you of an important event or task.

To move between days use the Up/Down/Right/Left keys.

Press LFK (Options) to display additional options:

- Add a task: you can enter a subject, change the date, time, set an alarm, and change the repeat mode (press the centre OK key to change).
- View tasks: allows you to see the tasks set for the day.
- All tasks: allows you to see all your saved tasks.
- Clear Today Task/Clear All: allows you to delete tasks,
- Go to Date: enter the date you wish to go to.
- Go to Today's date: allows you to go in the calendar to the current date,
- Week view/Day view toggles the calendar view.

22. Internet

To enter, select: **Menu >Internet**

Opera Mini, Dorado are universal web browsers for mobile browsing.

The device has the settings of the 4 largest national operators implemented. If the customer uses other services, go to the salon or visit the website of that operator and enter the correct settings in the MENU: Settings>Network>APN

23. Profiles

The phone has several profiles with which you can quickly adapt the phone to different situations. Each profile can be activated and customised according to

your needs. Available profiles: Normal, Quiet, Meeting, Outside,

You can edit the Normal profile by selecting:
Options> Settings

you can change:

- Ringtone (separate for SIM1/SIM2)
- Ringtone volume
- Ringtone type (ringing only, vibration only, etc.)
- Other sounds (key sounds, low battery alert, phone switch-off sound)

In Standby mode, press and hold the # key to activate the meeting profile, hold the # key again to return to the previous profile.

24. Settings:

24.1 Phone settings

MENU>Settings>Telephone

24.1.1 Date and time settings

To set the date and time, select in MENU:

Settings>Telephone>Time and date.

"Set time/date" to enter the time and date. To navigate between options, use the UP/DOWN keys; to enter an hour and date, use 0-9 keys.

You can also format the time (12h or 24h), and the date format

If the battery is removed from the phone, you will need to set the date and time when you reinsert it (if

the phone does not obtain data from the GSM network or auto update is disabled).

24.1.2 *Language*

MENU>Settings>Telephone>Language

Allows you to change the phone's menu language. If you accidentally set a foreign language to change to the correct one, in Standby mode press OK :

- select the icon  >OK
- OK
- 1x DOWN>OK
- OK

select the correct language and press OK.

24.1.3 *Language*

MENU>Settings>Telephone>Language

You can set the default text entry method.

24.1.4 *Shortcut settings*

MENU>Settings>Telephone> Shortcut settings

You can change the default shortcut settings for the right navigation key (RFK) and the UP/DOWN/LEFT/RIGHT navigation keys

24.1.5 *Automatic switching off of the phone*

You can set at what time and on what days the phone will automatically switch on/off.

Note. If the phone is protected by a password or PIN, the password/PIN must be entered manually for the phone to log on to the network

24.1.6 *Choosing web browser*

You can set your default web browser

24.1.7 *Restore factory setting*

With this option, you can restore the factory settings.

Select in the MENU:

Settings>Telephone>Restore settings. factory settings, and then enter the security password.

Finally, confirm with the green reviver key.

The default security password is: 1234

24.2 *Call settings*

MENU>Settings>Calls

24.2.1 *Dual SIM*

MENU>Settings>Calls>Dual SIM

You can select which SIM card(s) are to be active, the name of the SIM card and which SIM card is to be set as the default for the response

24.2.2 *Aeroplane mode*

To turn on the aeroplane mode (mobile network services switched off) select

MENU>Settings>Calls>Dual SIM>Standby>Airplane mode

24.2.3 *Call forwarding*

It is a network service. If your operator offers such a service, configuration will be required. The user

might direct incoming calls to be forwarded to voicemail or to any other number.

1. To set up the Call Forwarding service, go to MENU: Settings>Calls>Transferring a call
2. Then select when you want to transfer calls from the available list:
Unconditional (Forward all incoming calls to the selected number),
When busy (Forwarding incoming calls when you are currently on a call),
When not answering (Forwards incoming calls when you do not answer the phone),
When unreachable (Forwards calls when you have your phone switched off or are out of range),
Cancel all transfers.
3. Press Activate and enter the number to which you want to forward calls to activate the service or **Switch off**, to deactivate the service.

To check what the currently selected service status is, select Check status

24.2.4 Waiting call

It is a network service. If your operator offers such a service, configuration will be required.

After entering the MENU under the option:

Settings>Calls>Waiting call you can check the availability status and choose whether to activate this feature.

If the function of waiting call is activated , and the user is just making a call, every next incoming call

will be signaled by the signal of the second call. You can hold the current call and answer another call

24.2.5 Call blocking

It is a network service.

If your operator offers such a service, configuration will be required. This feature allows you to restrict certain types of calls.

1. Go to MENU to:

Settings>Call settings call>Call Blocking

2. Select the type of calls you want to block. You can block all outgoing calls, all outgoing international calls, international calls (except calls to a country), all incoming calls and incoming calls while roaming. You can also change the lock password.

24.2.6 Hiding the number

Go to MENU to:

Settings>Calls>Hide ID

It is a network service. If your operator offers such a service, configuration will be required. This feature allows you to hide your own number during a call.

Select "Hide number" or "Send number" "Sets network", and press "Ok".

24.2.7 Other Settings

Go to MENU to:

Settings>Calls>Other

You can set:

- Signalling the call time
- Automatic redialling when busy.
- Vibration when it reaches the number.
- SMS response when a call is rejected
- Answer with any key
- Automatic call recording

24.3 Display settings

MENU>Settings> Display

You can set:

- wallpaper,
- display of date, time, SIM1/SIM 2 operator name in standby mode
- phone saver
- display contrast
- display highlighting
- keyboard backlighting time

24.4 Font size settings

To set the font size, select

MENU>Settings>Display>Font size

24.5 Security settings

MENU>Settings> Security

24.5.1 PIN Code

You can enable/disable PIN code request at phone start-up and change the PIN code

24.5.2 *Change PIN2*

You can change the PIN2 code if you have one. Not all operators make it available.

24.5.3 *Phone lock*

You can enable the phone lock. You will have to enter the lock code when switching on the phone. The default code is 1234.

24.5.4 *Change phone password*

You can change your phone's lock code.

24.5.5 *Lock with red receiver*

Lock with red receiver allows to lock the keypad with the red receiver.

24.5.6 *Fixed dialling number*

Fixed numbers: service possible when made available by the operator. PIN2 required.

24.5.7 *Blacklist*

When the option is active and selected numbers are added to the blacklist, the phone automatically rejects a call or SMS (depending on the setting) upon receiving a call from given number

24.6 *Network settings*

MENU>Settings>Network

- APN: you can get the correct configuration from your operator. Some operators allow the phone to be configured remotely.

- GPRS service: allows you to select whether a GPRS connection is to be established
- Data roaming: allows you to select whether data connections are to be made while roaming
- Preferred SIM: you can choose which card to use for your data connection.
- Network selection: you can select the operator manually or automatically.
- Network type: you can choose your preferred type of connection to a 4G/3G/2G network
- VoLte: you can enable or disable making calls via LTE

WARNING! The options are designed for advanced users. Improperly changed settings can lead to a deterioration in service quality or an inability to make calls.

25. FAQ (troubleshooting)

Only qualified service is authorized to repair the phone. Any attempts of unauthorized repair and modifications are not allowed and they might void the Manufacturer's warranty!

„Cannot make a phone call”	Make sure the number you are dialling is correct. If you make an international phone call, dial a country code before the actual number (eg. 0049 or +49 for Germany). If you have a prepaid card, make sure there are sufficient funds available on the card to make a phone call.
----------------------------	---

“SIM Card in place, emergency calls only (112)”	Ensure that the SIM card is correctly installed.
“The phone does not work, the phone does not charge when plugged in”	<p>The phone might be switched off; to switch on the phone, press the power on/off key (red receiver) for about 3 seconds.</p> <p>If you have not used the phone for a long time, the battery might be “deeply-discharged”; to recover a deeply-discharged battery leave the charger plugged in, although there is no image on the display screen.</p>
“Can you make calls while being abroad?”	If the user is outside the country, the phone automatically logs on to the foreign network if ROAMING has been activated. Check with your operator.
„Can I make an emergency call if there is no reception or if there are no funds on my account?”	<p>If the phone is in the area with no network reception, no phone calls can be made.</p> <p>If you have so no funds available on the account, emergency call to 112 can be made.</p>
“How can coverage be increased?”	If there is a message „Does not work” it means there is no signal or no funds available on your account. In such a case, only making emergency calls to 112 will be possible if the user is within the network of other providers.

	Places such as buildings reduce signal strength, therefore you should get closer to a window or relocate to an area not surrounded by many buildings.
„What is the Text Message Center?”	It is the service provider's center number where all text messages are stored. The number is stored on the SIM Card, but you can change the number in NU and enter another number.
“When is the call fee is charged?”	The fee is charged as soon as the connection is established. Check with your operator to find out what the billing mode is.
“Is there any way to make sure my message was delivered to the recipient?”	Enable Delivery Report option. As soon as the text message is delivered to the recipient, you will get a return message (network service).

26. Conditions of use and safety

- Do not switch , the phone on if it may cause interference with other devices!
- You mustn't use your phone without hands-free accessories while driving.
- The telephone emits electromagnetic field that might negatively interfere with other electronic devices including medical equipment. A safe distance between a telephone and implanted medical devices such as a heart pacemaker should be maintained as recommended by manufacturers of medical equipment. Users with implanted devices should read and follow the

instructions by manufacturers of implanted medical devices. Users with a heart pacemaker should not carry a telephone in their front chest pockets and they should hold the telephone next to the ear opposite to the medical device in order to minimize the risk of interference;

- You mustn't use your phone in hospitals, airplanes, refuelling points or in proximity to flammable materials.
- Never repair or try to modify your phone by your own. Any faults should be repaired by a qualified service.
- The device and its accessories might contain small parts. Keep the phone and its components out of the reach of children.
- The phone must not be cleaned with any chemicals or caustic substances.
- Do not use the phone in proximity to pay and credit cards – doing so might erase data stored on the cards.
- For safety reasons, please do not talk on the phone while the charger is connected.
- Do not expose the device to low and high temperatures and direct influence of sunlight. Keep your phone away from heating devices such as radiators, heaters, ovens, furnaces, camp fires, barbecue, etc.
- Protect your hearing!



Long exposure to loud sounds might damage your hearing. Listen to music at a moderate level and do not hold the device next to your ear while using speakers. Prior to hooking the earpiece, always lower the volume.

27. Terms of Warranty

The phone is covered under the warranty; proof of purchase is necessary to use such warranty.

There is a fee for repair of devices damaged due to misuse, electrostatic discharge or lightning strike

Any attempts to fix or modify the device by the User will void the warranty!

Above disclosures are for information purposes.

28. Information concerning the battery

There is a battery in the phone, which may be charged again with the use of the charger.

The period of phone's operation depends on different conditions of operation. The distance from the relay station and the length and the number of calls significantly influence the shorter operation of the phone. While moving the phone continuously switches between the relay stations, which also considerably influences the period of phone's operation

The battery which was charged and discharged several hundred times naturally loses its properties. If the user observes significant loss of efficiency, it is necessary to buy a new battery.

Use only and exclusively the batteries recommended by the manufacturer.

Do not leave the charger connected for more than 2-3 days.

Do not store the phone in places where the temperature is too high. It may negatively influence the battery and the phone itself.

Never use the battery with visible damage. It may lead to the short circuit and the damage of the phone. The battery must be inserted in compliance with the polarization.

Leaving the battery, where the temperature is too high or too low, will make its life shorter. The battery must be stored in the temperature from 15°C to 25°C. If you insert cold battery to the phone, it may not operate correctly and there is a risk of damage. The set contains a Li-ion battery.

Used batteries are harmful to the environment. They should be disposed of at a special place in a special container in compliance with current regulations. Never throw old batteries or chargers to municipal solid waste, they should be collected for disposal.

DO NOT THROW BATTERIES INTO FIRE!

29. Protect Your Environment



\Note: Note phone is marked in compliance with the European Waste Electrical and Electronic Equipment Directive of 2002/19/EU and the Polish Act on Waste Electrical and Electronic Equipment, and with the symbol of waste electricals. Such a symbol tells us that the device, after use, must not be disposed of in the normal household waste stream.

Note: Never throw the device to municipal solid waste!!! The device should be utilized in authorized places only.

As the device contains hazardous components, improper storage and use of such equipment might lead to serious consequences harmful to both people and natural environment. To avoid such consequences, proper handling of waste electrical and electronic equipment is essential.

30. SAR Information

This telephone meets all international standards pertaining to the impact of radio waves. The device both receives and emits radio waves. It is designed not to exceed any limits pertaining to impact of radio waves recommended by international guidelines.

These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an independent scientific organization with a safety margin to protect all people regardless their age and health condition.

Such guidelines use a unit of measurement called Specific Absorption Rate (SAR) – actual absorption. As recommended by ICNIRP, the border value of SAR for portable equipment is 2,0 watts per kilogram (W/kg).

SAR value is determined at the maximum transmit power; the actual SAR value while the device is working is usually lower than the indicated level.

Such discrepancies result from automatic changes in device power necessary to ensure that the device operates at a minimum power level required to be connected with the network.

Although SAR values might vary for different models of phones or even for different positions of use - they are all compliant with regulations pertaining to safe level of radiation.

According to WHO current research, there is no need to apply any special restrictions in using mobile devices. According to WHO, in order to reduce radiation, a length of conversation should be reduced, or headphones or speakerphone should be used, not be hold the phone in proximity to head or body.

System	The highest value in test 10g-SAR(W/kg)		
	device at the		
	head	body	limb
EGSM 900	0.555	1.193	1.193
DCS 1800	0.029	0.200	0.200
WCDMA Band I	0.499	1.500	1.500
WCDMA Band VIII	0.559	1.076	1.076
LTE Band 1	0.278	1.232	1.232
LTE Band 3	0.145	1.021	1.021
LTE Band 7	0.212	1.148	1.148
LTE Band 8	0.678	1.309	1.309
LTE Band 20	0.424	0.703	0.703
LTE Band 38	0.312	0.846	0.846
Limit	2.0		4.0

SAR values might also vary due to various reporting and testing requirements in different countries as well as to different frequencies in a certain network..

31. SIMPLIFIED EU DECLARATION OF CONFORMITY

Maxcom SA is stating hereby that the radio device type:

Mobile phone MAXCOM MM918

complies with:

Directive 2014/53/EU RED of 16 April 2014 (Radio Equipment Directive) - radio equipment directive

Directive 2011/65/EU of 8 June 2011 (Restriction of the use of certain hazardous substances in electrical and electronic equipment RoHS)

To view the full text of EU Declaration of Conformity please visit:

<http://www.maxcom.pl/deklaracje>

Some of the information in this manual may vary depending on the configuration of the phone. This depends on the software installed, the service provider and the SIM card. The right is reserved to make changes to the product and its functions without prior notice.

Technical assistance, - number: 32 325 07 00 or email serwis@maxcom.pl

MAXCOM S.A.
43-100 Tychy,
ul Towarowa 23a
POLAND
tel. 32 327 70 89
fax 32 327 78 60

www.maxcom.pl
office@maxcom.pl

